

AD-A195 488

AUTOMATIC PROBER FOR THE DC CHARACTERISATION OF GALLIUM 1/1

ARSENIDE DEVICES (U) ROYAL SIGNALS AND RADAR

ESTABLISHMENT MALVERN (ENGLAND) J. I. HUGHES ET AL


UNCLASSIFIED

JUL 87 RSRE-MEMO-4866-PT-2 DRIC-DR-185535

F/C 28/12

NL

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67
68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117
118
119
120
121
122
123
124
125
126
127
128
129
130
131
132
133
134
135
136
137
138
139
140
141
142
143
144
145
146
147
148
149
150
151
152
153
154
155
156
157
158
159
160
161
162
163
164
165
166
167
168
169
170
171
172
173
174
175
176
177
178
179
180
181
182
183
184
185
186
187
188
189
190
191
192
193
194
195
196
197
198
199
200
201
202
203
204
205
206
207
208
209
210
211
212
213
214
215
216
217
218
219
220
221
222
223
224
225
226
227
228
229
230
231
232
233
234
235
236
237
238
239
240
241
242
243
244
245
246
247
248
249
250
251
252
253
254
255
256
257
258
259
260
261
262
263
264
265
266
267
268
269
270
271
272
273
274
275
276
277
278
279
280
281
282
283
284
285
286
287
288
289
290
291
292
293
294
295
296
297
298
299
300
301
302
303
304
305
306
307
308
309
310
311
312
313
314
315
316
317
318
319
320
321
322
323
324
325
326
327
328
329
330
331
332
333
334
335
336
337
338
339
340
341
342
343
344
345
346
347
348
349
350
351
352
353
354
355
356
357
358
359
360
361
362
363
364
365
366
367
368
369
370
371
372
373
374
375
376
377
378
379
380
381
382
383
384
385
386
387
388
389
390
391
392
393
394
395
396
397
398
399
400
401
402
403
404
405
406
407
408
409
410
411
412
413
414
415
416
417
418
419
420
421
422
423
424
425
426
427
428
429
430
431
432
433
434
435
436
437
438
439
440
441
442
443
444
445
446
447
448
449
450
451
452
453
454
455
456
457
458
459
460
461
462
463
464
465
466
467
468
469
470
471
472
473
474
475
476
477
478
479
480
481
482
483
484
485
486
487
488
489
490
491
492
493
494
495
496
497
498
499
500
501
502
503
504
505
506
507
508
509
510
511
512
513
514
515
516
517
518
519
520
521
522
523
524
525
526
527
528
529
530
531
532
533
534
535
536
537
538
539
540
541
542
543
544
545
546
547
548
549
550
551
552
553
554
555
556
557
558
559
560
561
562
563
564
565
566
567
568
569
570
571
572
573
574
575
576
577
578
579
580
581
582
583
584
585
586
587
588
589
590
591
592
593
594
595
596
597
598
599
600
601
602
603
604
605
606
607
608
609
610
611
612
613
614
615
616
617
618
619
620
621
622
623
624
625
626
627
628
629
630
631
632
633
634
635
636
637
638
639
640
641
642
643
644
645
646
647
648
649
650
651
652
653
654
655
656
657
658
659
660
661
662
663
664
665
666
667
668
669
670
671
672
673
674
675
676
677
678
679
680
681
682
683
684
685
686
687
688
689
690
691
692
693
694
695
696
697
698
699
700
701
702
703
704
705
706
707
708
709
710
711
712
713
714
715
716
717
718
719
720
721
722
723
724
725
726
727
728
729
730
731
732
733
734
735
736
737
738
739
740
741
742
743
744
745
746
747
748
749
750
751
752
753
754
755
756
757
758
759
760
761
762
763
764
765
766
767
768
769
770
771
772
773
774
775
776
777
778
779
780
781
782
783
784
785
786
787
788
789
790
791
792
793
794
795
796
797
798
799
800
801
802
803
804
805
806
807
808
809
810
811
812
813
814
815
816
817
818
819
820
821
822
823
824
825
826
827
828
829
830
831
832
833
834
835
836
837
838
839
840
841
842
843
844
845
846
847
848
849
850
851
852
853
854
855
856
857
858
859
860
861
862
863
864
865
866
867
868
869
870
871
872
873
874
875
876
877
878
879
880
881
882
883
884
885
886
887
888
889
890
891
892
893
894
895
896
897
898
899
900
901
902
903
904
905
906
907
908
909
910
911
912
913
914
915
916
917
918
919
920
921
922
923
924
925
926
927
928
929
930
931
932
933
934
935
936
937
938
939
940
941
942
943
944
945
946
947
948
949
950
951
952
953
954
955
956
957
958
959
960
961
962
963
964
965
966
967
968
969
970
971
972
973
974
975
976
977
978
979
980
981
982
983
984
985
986
987
988
989
990
991
992
993
994
995
996
997
998
999
1000
1001
1002
1003
1004
1005
1006
1007
1008
1009
1010
1011
1012
1013
1014
1015
1016
1017
1018
1019
1020
1021
1022
1023
1024
1025
1026
1027
1028
1029
1030
1031
1032
1033
1034
1035
1036
1037
1038
1039
1040
1041
1042
1043
1044
1045
1046
1047
1048
1049
1050
1051
1052
1053
1054
1055
1056
1057
1058
1059
1060
1061
1062
1063
1064
1065
1066
1067
1068
1069
1070
1071
1072
1073
1074
1075
1076
1077
1078
1079
1080
1081
1082
1083
1084
1085
1086
1087
1088
1089
1090
1091
1092
1093
1094
1095
1096
1097
1098
1099
1100
1101
1102
1103
1104
1105
1106
1107
1108
1109
1110
1111
1112
1113
1114
1115
1116
1117
1118
1119
1120
1121
1122
1123
1124
1125
1126
1127
1128
1129
1130
1131
1132
1133
1134
1135
1136
1137
1138
1139
1140
1141
1142
1143
1144
1145
1146
1147
1148
1149
1150
1151
1152
1153
1154
1155
1156
1157
1158
1159
1160
1161
1162
1163
1164
1165
1166
1167
1168
1169
1170
1171
1172
1173
1174
1175
1176
1177
1178
1179
1180
1181
1182
1183
1184
1185
1186
1187
1188
1189
1190
1191
1192
1193
1194
1195
1196
1197
1198
1199
1200
1201
1202
1203
1204
1205
1206
1207
1208
1209
1210
1211
1212
1213
1214
1215
1216
1217
1218
1219
1220
1221
1222
1223
1224
1225
1226
1227
1228
1229
1230
1231
1232
1233
1234
1235
1236
1237
1238
1239
1240
1241
1242
1243
1244
1245
1246
1247
1248
1249
1250
1251
1252
1253
1254
1255
1256
1257
1258
1259
1260
1261
1262
1263
1264
1265
1266
1267
1268
1269
1270
1271
1272
1273
1274
1275
1276
1277
1278
1279
1280
1281
1282
1283
1284
1285
1286
1287
1288
1289
1290
1291
1292
1293
1294
1295
1296
1297
1298
1299
1300
1301
1302
1303
1304
1305
1306
1307
1308
1309
1310
1311
1312
1313
1314
1315
1316
1317
1318
1319
1320
1321
1322
1323
1324
1325
1326
1327
1328
1329
1330
1331
1332
1333
1334
1335
1336
1337
1338
1339
1340
1341
1342
1343
1344
1345
1346
1347
1348
1349
1350
1351
1352
1353
1354
1355
1356
1357
1358
1359
1360
1361
1362
1363
1364
1365
1366
1367
1368
1369
1370
1371
1372
1373
1374
1375
1376
1377
1378
1379
1380
1381
1382
1383
1384
1385
1386
1387
1388
1389
1390
1391
1392
1393
1394
1395
1396
1397
1398
1399
1400
1401
1402
1403
1404
1405
1406
1407
1408
1409
1410
1411
1412
1413
1414
1415
1416
1417
1418
1419
1420
1421
1422
1423
1424
1425
1426
1427
1428
1429
1430
1431
1432
1433
1434
1435
1436
1437
1438
1439
1440
1441
1442
1443
1444
1445
1446
1447
1448
1449
1450
1451
1452
1453
1454
1455
1456
1457
1458
1459
1460
1461
1462
1463
1464
1465
1466
1467
1468
1469
1470
1471
1472
1473
1474
1475
1476
1477
1478
1479
1480
1481
1482
1483
1484
1485
1486
1487
1488
1489
1490
1491
1492
1493
1494
1495
1496
1497
1498
1499
1500
1501
1502
1503
1504
1505
1506
1507
1508
1509
1510
1511
1512
1513
1514
1515
1516
1517
1518
1519
1520
1521
1522
1523
1524
1525
1526
1527
1528
1529
1530
1531
1532
1533
1534
1535
1536
1537
1538
1539
1540
1541
1542
1543
1544
1545
1546
1547
1548
1549
1550
1551
1552
1553
1554
1555
1556
1557
1558
1559
1560
1561
1562
1563
1564
1565
1566
1567
1568
1569
1570
1571
1572
1573
1574
1575
1576
1577
1578
1579
1580
1581
1582
1583
1584
1585
1586
1587
1588
1589
1590
1591
1592
1593
1594
1595
1596
1597
1598
1599
1600
1601
1602
1603
1604
1605
1606
1607
1608
1609
1610
1611
1612
1613
1614
1615
1616
1617
1618
1619
1620
1621
1622
1623
1624
1625
1626
1627
1628
1629
1630
1631
1632
1633
1634
1635
1636
1637
1638
1639
1640
1641
1642
1643
1644
1645
1646
1647
1648
1649
1650
1651
1652
1653
1654
1655
1656
1657
1658
1659
1660
1661
1662
1663
1664
1665
1666
1667
1668
1669
1670
1671
1672
1673
1674
1675
1676
1677
1678
1679
1680
1681
1682
1683
1684
1685
1686
1687
1688
1689
1690
1691
1692
1693
1694
1695
1696
1697
1698
1699
1700
1701
1702
1703
1704
1705
1706
1707
1708
1709
1710
1711
1712
1713
1714
1715
1716
1717
1718
1719
1720
1721
1722
1723
1724
1725
1726
1727
1728
1729
1730
1731
1732
1733
1734
1735
1736
1737
1738
1739
1740
1741
1742
1743
1744
1745
1746
1747
1748
1749
1750
1751
1752
1753
1754
1755
1756
1757
1758
1759
1760
1761
1762
1763
1764
1765
1766
1767
1768
1769
1770
1771
1772
1773
1774
1775
1776
1777
1778
1779
1780
1781
1782
1783
1784
1785
1786
1787
1788
1789
1790
1791
1792
1793
1794
1795
1796
1797
1798
1799
1800
1801
1802
1803
1804
1805
1806
1807
1808
1809
1810
1811
1812
1813
1814
1815
1816
1817
1818
1819
1820
1821
1822
1823
1824
1825
1826
1827
1828
1829
1830
1831
1832
1833
1834
1835
1836
1837
1838
1839
1840
1841
1842
1843
1844
1845
1846
1847
1848
1849
1850
1851
1852
1853
1854
1855
1856
1857
1858
1859
1860
1861
1862
1863
1864
1865
1866
1867
1868
1869
1870
1871
1872
1873
1874
1875
1876
1877
1878
1879
1880
1881
1882
1883
1884
1885
1886
1887
1888
1889
1890
1891
1892
1893
1894
1895
1896
1897
1898
1899
1900
1901
1902
1903
1904
1905
1906
1907
1908
1909
1910
1911
1912
1913
1914
1915
1916
1917
1918
1919
1920
1921
1922
1923
1924
1925
1926
1927
1928
1929
1930
1931
1932
1933
1934
1935
1936
1937
1938
1939
1940
1941
1942
1943
1944
1945
1946
1947
1948
1949
1950
1951
1952
1953
1954
1955
1956
1957
1958
1959
1960
1961
1962
1963
1964
1965
1966
1967
1968
1969
1970
1971
1972
1973
1974
1975
1976
1977
1978
1979
1980
1981
1982
1983
1984
1985
1986
1987
1988
1989
1990
1991
1992
1993
1994
1995
1996
1997
1998
1999
2000
2001
2002
2003
2004
2005
2006
2007
2008
2009
2010
2011
2012
2013
2014
2015
2016
2017
2018
2019
2020
2021
2022
2023
2024
2025
2026
2027
2028
2029
2030
2031
2032
2033
2034
2035
2036
2037
2038
2039
2040
2041
2042
2043
2044
2045
2046
2047
2048
2049
2050
2051
2052
2053
2054
2055
2056
2057
2058
2059
2060
2061
2062
2063
2064
2065
2066
2067
2068
2069
2070
2071
2072
2073
2074
2075
2076
2077
2078
2079
2080
2081
2082
2083
2084
2085
2086
2087
2088
2089
2090
2091
2092
2093
2094
2095
2096
2097
2098
2099
2100
2101
2102
2103
2104
2105
2106
2107
2108
2109
2110
2111
2112
2113
2114
2115
2116
2117
2118
2119
2120
2121
2122
2123
2124
2125
2126
2127
2128
2129
2130
2131
2132
2133
2134
2135
2136
2137
2138
2139
2140
2141
2142
2143
2144
2145
2146
2147
2148
2149
2150
2151
2152
2153
2154
2155
2156
2157
2158
2159
2160
2161
2162
2163
2164
2165
2166
2167
2168
2169
2170
2171
2172
2173
2174
2175
2176
2177
2178
2179
2180
2181
2182
2183
2

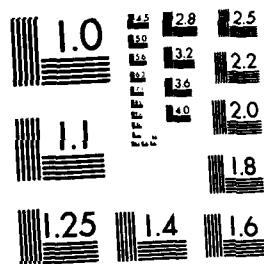

MICROCOPY RESOLUTION TEST CHART
NATIONAL BUREAU OF STANDARDS-1963-A

AD-A195 408

ROYAL SIGNALS AND RADAR ESTABLISHMENT

Memorandum 4066

Title: AUTOMATIC PROBER FOR THE DC CHARACTERISATION OF
GALLIUM ARSENIDE DEVICES:- PART TWO, THE DATA SORTING
AND DISPLAY FACILITY

Authors: B T Hughes and B E Avery

Date: July 1987

ABSTRACT

The Automatic Device Probing System used in the Microwave Devices Division (DP2) comprises separate measurement and data handling facilities. the measurement facility is described in RSRE Memorandum 4065 and the data sorting and display facility forms the subject of this memorandum.

The facility described is designed to assist in analysing the large quantity of measured data obtained from device wafers and allows general trends as well as individual device parameters to be investigated. Programs have been written to produce maps which allow parameter variations across wafers to be assessed and additional routines are available which present the data in histogram form. These options allow the numeric as well as the geographic distribution of the data to be investigated. Three main types of map display are available, these display the variation in magnitude of a device parameter across a wafer, the location and nature of the failure of any failed devices and the location of devices with a specified combination of parameters. The histogram programs allow the data range and class interval to be adjusted enabling estimates of yield and process control to be made. For measurements such as Capacitance/Voltage on Schottky test patterns or current/voltage on active devices plots of the measured data can be displayed. Routines are available which allow curve fitting to the measured data so that barrier heights etc can be extracted.

Full use has been made of colour and grey scales in order to maximise the visual content of the information presented on the display screen and all display modes are easily selected using a combination of menus and softkeys.

Copyright
C
Controller HMSO London
1987



Accession For	
NTIS CRA&I	<input checked="" type="checkbox"/>
DTIC TAB	<input type="checkbox"/>
Unannounced	<input type="checkbox"/>
Justification	
By	
Distribution /	
Availability Codes	
Dist	Avail and/or Special
A-1	

AUTOMATIC PROBER FOR THE DC CHARACTERISATION OF GALLIUM ARSENIDE
DEVICES

PART TWO :- THE DATA SORTING AND DISPLAY FACILITY

CONTENTS

- 1) INTRODUCTION
- 2) HARDWARE DESCRIPTION
- 3) DISPLAY OPTIONS
 - i) General
 - ii) Histograms
 - iii) Maps
 - iv) Scatter Plots
- 4) MEASUREMENT DETAILS
 - i) Resistance
 - ii) Capacitance
 - iii) Transmission Line Ohmic Measurements
 - iv) Field Effect Transistors
 - v) Detailed FET Characteristics
 - vi) Diode Forward Characteristics
 - vii) C/V Profiling
- 5) SOFTWARE DESCRIPTION
 - i) General
 - ii) Histogram Plotting
 - iii) Grey Scale Maps
 - iv) Selection Maps
 - v) Scatter Plotting
 - vi) Failure Maps
 - vii) C/V Measurements
 - viii) Detailed FET V/I
 - ix) Diode Forward I/V
 - x) Transmission Line Ohmic Measurements
 - xi) Data Conversion
- 6) CONCLUSIONS
- 7) ACKNOWLEDGEMENTS
- 8) REFERENCES

AUTOMATIC PROBER FOR THE DC CHARACTERISATION OF
GALLIUM ARSENIDE DEVICES

PART TWO :- THE DATA SORTING AND DISPLAY FACILITY

1) INTRODUCTION

RSRE Memo No 4065 described the measurement aspects of the DP2 prober system. This memo describes the data handling aspects of the system and, where applicable, defines the device parameters being analysed.

The initial version of the autoprober system used the same computer to both control the measuring system and sort and display the measured data. This system soon proved to be a major bottleneck in wafer processing as the HP86 computer used was relatively slow in sorting and displaying the data and a queue of wafers waiting to be probed soon built up. An additional demand on the system was caused by the enthusiasm with which the processing teams adopted the wide range of measurements available. It was also realised during this period that computer printers and plotters were not necessarily clean room compatible. Owing to these factors it was decided to separate the two functions of the probing system and construct a separate data handling and display facility outside the clean area. The computer used for this facility was chosen to be better suited to the data handling and display requirements. A separate suite of software was written to take full advantage of the extra sophistication and speed for which the need had become apparent.

The computer system on which this facility is based is described in section two of this memo. The various options available for displaying the data are described in section three. Section four of this memo describes the specific details of the individual measurements and section five describes the software used for data handling, parameter extraction and display. A full software listing is given in a separate Appendix.

2) HARDWARE DESCRIPTION

COMPUTER:- Hewlett Packard 9000 Series 300

Technical computer fitted with 3 Mbyte of random access memory. The primary operating system is BASIC version 4.0. The display system is bit-mapped and a 12 inch colour monitor is fitted. A Hewlett Packard 9122D 3.5 inch disc drive is used for program and data storage. Operator input is either by keyboard or mouse.

PLOTTER:- Hewlett Packard 7475A 6 pen graphic plotter.

PRINTERS:- Hewlett Packard 2225A Thinkjet matrix printer,
used for screen dumping.

Epson FX100, used for printed data output.

3) DISPLAY OPTIONS

i) GENERAL

In order to make full use of the data available it was decided that the general approach would be to attempt to combine facilities for obtaining an overall impression of device parameters with the ability to select and display data down to individual device level. A consequence of this approach is that a large amount of computer storage is required so that complete data files can be stored in RAM ready for immediate access. Storage is also required for parameters derived from the measured data. A strong emphasis was placed on the visual presentation of data with full colour and grey scale displays considered essential. As the system would be available for general use a menu driven system was designed with all commands entered using softkeys. The particular display options required for different data sets are automatically selected by the computer.

ii) HISTOGRAMS

The most straightforward way of indicating the range and distribution of a set of data is to display it in histogram form. The histogram program written for this system automatically scales the X axis from zero to the maximum value measured and selects a large box size to give an initial display of all the data gathered, figure (1). Options are then made available to reduce the box size and select alternative maximum and minimum values for the X and Y axes. Figure (2) shows a selected region of figure (1) and demonstrates the effect of reducing the box size and restricting the data range.

All histogram plots contain a data panel down the right hand side of the display. The parameters displayed in this data panel are defined below and are illustrated with an example based on a wafer containing a 10 x 10 array of FETs with the probe commanded to probe a 10 x 11 array.

a) BOXSIZE

The size of the class interval used to produce the histogram being displayed.

b) COLUMNS

The number of devices in the X direction the prober was commanded to probe. In the example COLUMNS = 10.

c) ROWS

The number of devices in the Y direction the prober was commanded to probe. In the example ROWS = 11.

d) OFF WAFER

The number of times the prober edge detector indicated an off wafer condition during the probing run. In the example the eleventh row is assumed to be off the wafer and:-

OFF WAFER = 10.

e) TOTAL PROBED

The actual number of device sites probed ie:-

(COLUMNS X ROWS) - OFF WAFER.

This parameter takes account of the fact that although the prober table movements are defined as a rectangular array most wafers are circular or semi-circular.

In the example OFFWAFER = 10 therefore:-

TOTAL PROBED = (10 x 11) - 10 = 100.

f) NUMBER PLOTTED

The total number of data points occurring in the data range selected, ie the sum of the class frequencies of all the boxes displayed on the associated histogram plot. It should be noted that NUMBER PLOTTED will vary as the Xmax and Xmin values are altered.

If, in the example, we assume that Idsso is being plotted over the data range from 20 to 40 mA and that 10 devices have Idsso values between 20 and 40 mA, then:-

NUMBER PLOTTED = 10.

g) OVERALL YIELD

During probing a number of tests are carried out on the data being obtained. Only those devices which

pass all the relevant tests are classed as successful devices. The DEVICE YIELD is defined as "the total number of devices on the wafer which lie within all the default failure limits operating during probing".

$$\text{The OVERALL YIELD} = \frac{\text{DEVICE YIELD}}{\text{TOTAL PROBED}} \times 100\%$$

If, in the example, it is assumed that a total of 30 FETs, out of the 100 possible, passed all the probing tests then the DEVICE YIELD = 30 and:-

$$\text{OVERALL YIELD} = \frac{30}{100} \times 100\% = 30\%$$

h) DISPLAY YIELD

This relates to the particular device parameter being displayed and is defined as:-

$$\text{DISPLAY YIELD} = \frac{\text{NUMBER PLOTTED}}{\text{TOTAL PROBED}}$$

If, in the example, we assume that 15 FETs failed any one of the measurements preceeding the Idsso measurement and if we also assume that a further 25 FETs failed during the Idsso measurement then, at the conclusion of the Idsso measurement, a total of 40 FETs have failed (ie 15 + 25). Of the 100 devices possible on the example wafer 60 are therefore left at the conclusion of the Idsso measurement.

If the Idsso histogram is plotted for the complete data range then:-

$$\text{DISPLAY YIELD} = \frac{60}{100} \times 100\% = 60\%$$

If the data range of the histogram is altered to cover the range from 20 mA to 40 mA and if 10 FETs have Idsso values within this range then in this case:-

$$\text{DISPLAY YIELD} = \frac{10}{100} \times 100\% = 10\%$$

i) MAXIMUM

The maximum value measured for the particular parameter being displayed.

j) MINIMUM

The minimum value measured for the particular parameter being displayed.

k) MEAN

The arithmetic mean of all the data points within the data range selected.

ie:
$$\frac{\text{(The sum of the data points between x max and x min)}}{\text{NUMBER PLOTTED}}$$

l) STANDARD DEVIATION

The standard deviation of all the data points within the range selected.

$$\text{Std. Dev.} = (\bar{x}^2 - (\bar{x})^2)^{\frac{1}{2}}$$

iii) MAPS

In order to fully assess any process, or combination of processes, it is necessary to examine the geographic distribution of the measured device parameters as well as the numeric distribution. Three types of map display are available, these show the geographic distribution of the numeric data, the geographic distribution of the failure modes of any failed devices and the geographic distribution of devices with a specified set of electrical parameters.

a) GREY SCALE MAP

This facility enables the geographic distribution of the numeric data to be displayed. The wafer data is examined device by device and each device is allotted a grey scale intensity which is related to the measured value of the device parameter being investigated. The grey scale map is drawn with each device represented by a rectangle, the intensity of the rectangle corresponds to the magnitude of the parameter and the relative position of the rectangle on the screen corresponds to the original position of the device on the wafer. Owing to printer limitations only seven grey scales are available to cover the range from black to white so the data is always sorted into seven consecutive classes with each class size equal to one seventh of the data range. The initial grey scale map drawn when this mode of display is selected has a data range between the minimum and maximum measured values of the parameter being displayed, figure (3). Subsequent maps can be drawn with data ranges selected in the same fashion as in the histogram mode. Figure (4) and figure (5) show how the distribution of the data can be highlighted with judicious control of the data range.

An additional feature of the map drawing program is also illustrated in these figures. Because the device X and Y pitches on the wafer are not necessarily

equal the resultant map display, drawn using the same X and Y scales, can be elliptical rather than circular. A facility exists to allow different X and Y scales to be used for drawing, this results in the more representative displays shown.

b) FAILURE MAP

As described in RSRE Memo 4065 the probing program contains a number of built in pass/fail tests for all device parameters measured. All failures are identified with a specific token which is stored in the array containing the measured data. The failure map makes use of these tokens and draws a colour map of the wafer with specific colours associated with specific parameter failures. An example of a failure map is shown in figure (6).

c) SELECTION MAP

A useful facility, when selecting devices for RF testing, is the ability to specify an envelope of device parameters and then identify where those devices which lie within this envelope are located on the wafer. Figure (7), Figure (8) and Figure (9) show selection maps of the same wafer of FETs in which Idsso ranges of 20 to 30 mA, 30 to 40 mA and 40 to 50 mA have been used as a single selection parameter. The selection program allows any number of parameters to be combined to form a "device specification" or "device template". In addition to the map display a printer output of the measured DC parameters of all devices selected can be obtained.

This facility can also be used to assess the device yield on a wafer using more realistic pass/fail criteria than the very broad ones used during device probing.

iv) SCATTER PLOTS

This option operates on FET data only and allows any two measured FET parameters to be plotted against each other. An example of a scatter plot is shown in figure (10). Facilities are available to plot the data on logarithmic scales and select the data ranges for the X and Y axis.

4) MEASUREMENT DETAILS

i) RESISTANCE

This measurement option is usually used to determine the resistivity of the various metals deposited to form ohmic or Schottky contacts or interconnect tracks. It should be noted that although a four probe measurement technique is used allowance must be made, when interpreting the results, for parasitic series resistances due to the difficulty of placing the probes reproducibly and exactly.

The display options available include histograms, grey scale maps, selection maps and failure maps.

ii) CAPACITANCE

All capacitance measurements are carried out in the parallel equivalent circuit mode and values of capacity and conductance obtained. It should be noted that a parasitic probe contact resistance is always present owing to the two probe measurement circuit used.

Display options available include histograms, grey scale maps, selection maps and failure maps.

iii) TRANSMISSION LINE OHMIC MEASUREMENTS

This measurement is carried out using the 4 probe configuration described in the RESISTANCE section. Definitions of the parameters obtained are given below:-

a) CONTACT RESISTANCE (OHM-MM)

The resistance between the metallisation and an imaginary plane at the edge of, and perpendicular to, the ohmic metallisation. The value obtained for this parameter, although subject to experimental error, is a true experimentally determined one. The value for contact resistance presented is normalised to ohm-mm.

b) SPECIFIC CONTACT RESISTANCE (OHM-CM²)

The contact resistance of a unit area for current flow perpendicular to the contact. An assumption underlying the approach used to extract this parameter is that the sheet resistance of the semiconductor under the contact pad is the same as that in the gap between the contacts. Caution should be exercised when assessing the quality of ohmic contacts using this particular parameter

c) OHMS PER SQUARE (OHMS or OHMS per SQUARE)

The sheet resistance of the conducting layer of semiconductor between the ohmic contacts. The value obtained for this parameter is a true experimentally determined one.

A full treatment of the theory on which the measurement technique is based is given in Ref (1). To supplement the definitions given above a brief description of the physical principles underlying the technique used in the DP2 system is included in this section.

The DP2 standard test structure consists of 5 ohmic contact pads fabricated on a mesa 100 microns wide. The contact pads are separated by gaps of 5, 10, 15 and 20 microns. The semiconductor surrounding the mesa is semi-insulating and the mesa itself is etched in the same fashion as any device mesas on the wafer. When a voltage is applied between two adjacent ohmic contacts a current flows along one ohmic contact, transfers to the semiconductor and flows across the gap between the pads before transferring out of the semiconductor into the second ohmic contact, fig (11). The total resistance of the circuit described is comprised of the resistance of the semiconductor in the gap between the two ohmic contacts and two equal contributions due to the contact resistance between the ohmic contact pads and the semiconductor, ie:-

$$R_{\text{measured}} = R_{\text{gap}} + 2 \times (\text{contact resistance}) \quad (1)$$

If the separation between the two pads is l_g , the width of the mesa is W and the sheet resistance of the semiconductor in the gap is R_{SH} ohms per square then:-

$$R_{\text{gap}} = R_{SH} \cdot l_g / W$$

equation (1) therefore becomes

$$R_{\text{measured}} = R_{SH} \cdot \frac{l_g}{W} + 2 \times (\text{contact resistance}) \quad (2)$$

At each test site R_{measured} can be obtained for several values of l_g , a straight line fitted to this data will have the following properties:-

$$\text{Slope} = R_{SH} / W \quad (3)$$

$$\text{Intercept on } R_{\text{measured}} \text{ axis} = 2 \times (\text{contact resistance}) \quad (4)$$

The contact resistance and sheet resistance can be obtained from equations (3) and (4). It is usual to quote the contact resistance normalised for a 1mm wide gap, i.e:- normalised contact resistance = (contact

resistance) x W ohm-mm.

In order to obtain a value for the specific contact resistance of the ohmic contact the area of the contact is required. Due to the complex manner in which the current progressively transfers from the ohmic contact into the semiconductor a parameter called the "transfer length", (l_t), is defined which corresponds to the length, in the direction of the current flow, over which $(1-1/e)$ of the current transfers from the contact pad to the semiconductor. This transfer length is measured from the edge of the gap. The effective contact area is therefore $l_t \times W$. In order to obtain a value for l_t it is assumed that the sheet resistance of the semiconductor under the contact pads is the same as the sheet resistance in the gap between the contacts. Equation (2) then becomes:-

$$R_{\text{measured}} = R_{SH} \cdot \frac{l_g}{W} + 2 \times R_{SH} \cdot \frac{l_t}{W} \quad (5)$$

A straight line plot of this data yields the same sheet resistance and contact resistance information as before but allows l_t to be estimated from the intercept of the fitted line with the l_g axis.

ie. when $R_{\text{measured}} = 0$

$$R_{SH} \cdot \frac{l_g}{W} = - 2 \times R_{SH} \cdot \frac{l_t}{W} \quad (6)$$

Cancelling terms in equation (6) gives:-

Intercept on l_g axis = $-2 l_t$.

hence:- Specific Contact Resistance = $\frac{\text{(Contact Resistance)}}{l_t \times W \text{ ohm-cm}^2}$

In addition to the general contact parameters described above the measured resistances for each gap can be displayed, fig (1) and fig (2). Histograms, grey scale maps and selection maps can be obtained for all parameters allowing the uniformity of alloying, metal deposition etc to be investigated.

In an attempt to eliminate the occasional inconsistent individual gap measurement the data for each test site is examined prior to map plotting. If the measured resistance for a particular gap is higher than the measured resistance for the next (larger) gap then the data set for that particular test site is classed as "invalid data". It should be noted that all measurements are included in the histogram plots for the individual gap resistances.

To allow the quality of the data to be assessed plots of the measured resistances vs gap length can be displayed for each test pattern site. The measured data and the best straight line fitted to the data are displayed as is the correlation coefficient for the fitted line.

The comments made in the section on RESISTANCE regarding parasitic series resistances due to the difficulty of placing probes exactly and reproducibly also apply here. Particular attention should be given to the series resistance due to the high resistivity of the various alloys used to form the contacts. The data analysis relies heavily on accurate values for the interpad gaps, to allow for the inevitable processing variations the default values of 5, 10, 15 and 20 microns can be replaced with accurately measured ones. The facility also exists to change the default mesa width of 100 microns.

iv) FIELD EFFECT TRANSISTORS

The FET parameters extracted are defined in figure (12). Histograms, maps and scatter plots can be obtained for all FET parameters.

Selection maps have proved to be of particular use when investigating FET data and the following abbreviated "device specification" forms a good basis for assessing the true overall yield on a wafer of 200 micron gate width FETs:-

	<u>MIN</u>	<u>MAX</u>
Rslope (Ohms)	5	40
Idsso (mA)	20	60
gm (mS)	15	maximum measured
Igate (microamps)	minimum measured	5

v) DETAILED FET CHARACTERISTICS

This facility is mainly used to provide experimental data to assist in establishing device models. Display options are limited to plots of the measured Vds vs Ids characteristics, figure (13), plots of Ids vs Vgs, figure (14), Gm vs Ids and Gm vs Vgs. For plots other than Vds vs Ids the data can be plotted at a selected value of Vds.

vi) DIODE FORWARD CHARACTERISTICS

The electrical parameters of a Schottky diode can be used to monitor "standard" processing and assess the practical effects of improved or alternative fabrication

processes. This measurement option allows extraction of the ideality, barrier height and series resistance of Schottky diodes. A full mathematical treatment of the measurement can be found in Ref (1) and Ref (2) but as an aid to the user, an outline of the technique used in the DP2 system is given below:-

The simplified equation governing the behaviour of a Schottky diode is taken to be:-

$$I = I_0 \exp \left(\frac{qV}{nkT} \right) \quad (1)$$

I is the forward diode current at forward voltage V
q is the electronic charge 1.602×10^{-19} Coulombs
n is the ideality factor
k is Boltzmann's constant, 1.38×10^{-23} J/K
T is the absolute temperature, 295K
I₀ is defined as:-

$$I_0 = \text{Area of diode} \cdot A^* \cdot T^2 \exp \left(\frac{V_B \cdot q}{kT} \right) \quad (2)$$

where A* is the effective Richardson constant, $8.4 \text{ A/cm}^2/\text{K}$
V_B is the barrier height in eV.

Taking logs of equation (1)

$$\log_e I = \frac{qV}{nkT} + \log_e I_0 \quad (3)$$

A plot of $\log_e I$ vs V will give a straight line with

$$\text{slope} = \frac{q}{nkT} \quad (4)$$

$$\text{Intercept} = \log_e I_0 \quad (5)$$

The ideality and barrier height are obtained using equations (4), (5) and (2).

The straight line fitting to the measured data can either be carried out automatically by the computer or a fit between two selected current levels can be requested. The automatic fitting routine examines each decade of current and performs a least squares fit on the 10 data points within that decade. A measure of the "goodness" of the fit for each decade is calculated by summing the squares of the deviations in each case. The best straight line for the complete set of data is then assumed to be that line which has the best fit over one decade of the current range. The manual curve fitting routine simply performs a least squares fit to the data between the two values of current selected. The correlation coefficient displayed in the data panel

refers to the best straight line fit over one decade of the linear region of the diode characteristics in the auto fitting mode. The correlation coefficient quoted for manual fitting is for the range selected.

Having selected the best straight line the program then determines the difference, at the maximum forward current, between the actual forward voltage measured and the forward voltage predicted by the fitted line. This voltage difference is assumed to be due to the voltage drop across the series resistance of the diode. Knowing the associated current the series resistance of the diode can be calculated. A plot of the combined diode fit plus series resistance is then drawn for comparison with the measured data, fig (15). It should be noted that in order to obtain the maximum voltage drop across the series resistance the diode forward current should be maximised. Excessive currents through small area Schottky diodes can however cause permanent damage so a compromise value of forward current may have to be used.

The diode I/V measurement can be performed using the auto step facility, histograms and maps of the diode parameters can be displayed in the usual manner.

vii) C/V PROFILING

This program is usually used to analyse data obtained from measurements on a standard FATFET. Unless told otherwise the computer assumes the size of the Schottky contact is that of a FATFET, ie 100 x 150 microns. Typical zero bias capacities of FATFETs are in the range 20 pF to 40 pF. C/V measurements have been carried out on real devices with zero bias capacities of 2 to 4 pF, a small number of measurements on smaller capacity devices have successfully been carried out.

The carrier concentration values are extracted from the C/V data using the standard approach as described in Ref (3), it should be noted that no corrections are applied for fringing capacitance or series resistance due to the planar geometry of the FATFET structure. Owing to these series resistance effects doping profiles are likely to be inaccurate at doping levels below 10^{15} cm^{-3} .

C/V measurements can be performed across a wafer using the autostep facility, grey scale maps of the carrier concentration near the surface can be produced to indicate variations across the wafer. It should be remembered that the data obtained will contain variations due to non-uniformity of processing in addition to any non-uniformity present in the starting material.

Individual plots of C vs V and Nd vs depth can be obtained by using the mouse to pick the individual device field off a map of all the device fields measured. A display option is available which will allow all the profiles obtained from a wafer to be overlaid in the same display, figure (16). This type of display can sometimes be confusing as the program assumes that any etching has been uniform across the wafer and that all test patterns have been fabricated on the same level. If an absolute depth scale is required a facility is available to add a known etch step to the data.

5) SOFTWARE DESCRIPTION

i) GENERAL

All the programs are written in BASIC Version 4.0 and are initially loaded into memory on power up from a program called (Autost). User interaction with the software is via the computer keyboard and a mouse.

On program start a menu is displayed defining eight softkeys, only two of these softkeys, ie softkey f7 and f8, are active initially, see fig (17). Softkey f7 is labelled ENTER DATA and is used to load the appropriate data file to be analysed. Before the data files can be analysed by the program they must first be converted from the HP 86B disc storage format to the SERIES 300 disc storage format. Soft key f8 is used to select the data conversion program. Once converted the data is stored, in SERIES 300 Format, on a working disc. The HP86 disc is kept as an archive copy.

Assuming all the data files have been converted to the Series 300 computer format then selection of softkey f7 presents a display of the contents of the data disc directory file. Each file name is displayed along with its associated description and probing date. To select a data file the operator is instructed to use the mouse which moves a white band up or down the screen. File selection is made by placing the white band over the file name and description and pressing either of the MOUSE KEYS. Dependant upon the file type selected the relevant subroutine or subprogram is called. These are as follows:-

```
Data Type 'F' Subroutine [Enterfetdata], line 729.
Date Type 'O' Subroutine [Enterohmicdata], line 744.
Data Type 'C' Subroutine [Enterapdata], line 778.
Data Type 'S' Subroutine [Enternewohmic], line 765.
Data Type 'P' line Cvselected,176 Subprogram [Cvplot]
Data Type 'V' line Viselected,182 Subprogram [Vipplot]
Data Type 'I' line Idealitysel,188 Subprogram [Ideal]
Data Type 'R' line Transelected,194 Subprogram [Transline]
```

Should any error occur when a data file is being loaded the program goes to [Initialstart] with a Boolean variable called 'Menucontrol' set 'False'. If the data file is read successfully variable 'Menucontrol' is set 'True'. If 'Menucontrol' is 'False' then the menu only allows selection of the two options selected by softkeys f7) & f8) ie, enter new data or convert data. If 'Menucontrol' is 'True' ie, a data file has been successfully loaded into memory, the following additional softkeys are active from the menu:-

- f1) HISTOGRAM PLOTTING
- f3) MAPPING
- f4) SELECTION MAPPING
- f5) SCATTER PLOTTING
- f6) FAILURE MAP

See fig (18)

A detailed description of each of these options is given in the following sections.

ii) HISTOGRAM PLOTTING

On selection of the Histogram option the program goes to Histselect, line 200. A subroutine called [Paramchange] is called which allows selection of the parameters for which the Histogram is to be plotted. For a FET data file the parameters are RSLOPE, IDSS0, GD, VKNEE, GM, IGATE, IDSS4, and VPINCH. A capacitance file has two selectable parameters, CAPACITANCE and CONDUCTANCE. Selection of a parameter is made by softkey in subprogram [Selectparam], line 1909, which is called up from subroutine [Paramchange]. When a parameter has been selected a variable called 'Paramcase' is given a fixed value to identify the selection. In subroutine [Paramchange] the value of 'Paramcase' determines which data is placed in a variable array called 'Fetval'. The maximum and minimum values are stored in variables 'Devmax' and 'Devmin'. The string variable 'Param\$' stores the data for plot titles. The array 'Fetval' is a common array available to all subprograms.

After selecting a parameter the program enters the subprogram [Histogram], line 1453. A data array called 'Value' is allocated and a default boxsize is given to variable 'Boxsize' according to the value in variable 'Hmax', program lines 1469 to 1474. The measured parameter values in array 'Fetval' are extracted, sorted into numerical order and then stored in the sorted form in an array called 'Value'. The histogram box filling routine takes the form of a program loop between lines 1496 and 1506. On entry into this loop a pass window is defined of size minimum value to minimum value plus 'Boxsize'. This window is compared against the sorted array 'Value' to determine the number of device measurements that occur within the window. The number of devices that occur in the

window variable 'Numbox' are then stored in an array called 'Box'. In the loop the upper and lower boundaries of the window are incremented by 'Boxsize' and the process is repeated until the window exceeds the maximum measured value or the number of devices in the array 'Box' equals the total number of devices measured. The array 'Box' is then plotted graphically on the colour monitor screen as a histogram. The default scale for the 'X' axis is minimum = 0, maximum = variable 'Devmax'. The scale for the 'Y' axis is determined by the highest value of the variable 'Numbox'.

A typical histogram display is shown in figure (1).

After the histogram has been plotted five softkeys are allocated to a Histogram menu from which the user can select the following options:-

- f1) RETURN TO MAIN MENU
- f2) UNUSED
- f3) CHANGE BOXSIZE i.e. 10, 5, 1, .5, .1, OR .01
- f4) EXPAND X OR Y AXIS
- f7) PLOTTER COPY
- f8) PRINTER COPY

Selection of softkey f1) aborts the histogram plotting routine and returns the program back to the main menu. Softkey f3) allows the boxsize to be changed. Once the boxsize has been changed the box filling routine described earlier is repeated with the new value for "Boxsize", the results are displayed on the screen as before. Softkey f4) allows selected regions of the 'X' and 'Y' axes to be plotted. Selection of softkey f4) calls subprogram [Enter maxmin], line 3032. This subprogram allows new 'X' and 'Y' maximum and minimum values to be entered. Exit from the subprogram is by softkey f1) which is allowed only if the maximum values entered are greater than the minimum values entered. On exit from the subprogram the histogram is automatically redrawn with the new axes.

Selecting softkey f7) produces a hard-copy plot of the screen display drawn on a six colour pen plotter. Softkey 'f8' performs a screen dump to an inkjet printer which is monochrome only.

iii) GREY SCALE MAP

The map is plotted to a default scale held by the variables 'Devmax' and 'Devmin' of the selected parameter. Seven intensities or seven shades of grey are used to represent the data. The window for each intensity or shade of grey is calculated by subtracting the minimum value 'Devmin' from the maximum value 'Devmax' and dividing the result by seven. Seven windows are therefore created into which the data can be slotted, the values being held in variable array 'Inc'. The map is plotted within a double

loop in the program. The number of times the first loop is repeated is determined by the number of device columns (variable 'Xcol'). The number of times the second loop, which is inside the first loop, is repeated is determined by the number of device rows (variable 'Yrow'). Each increment of the loop corresponds to the measured device data and position. Program lines 1108 to 1176 show the comparison of the measured device data to the window variable 'Inc'. The result of each comparison is a shade of grey value held in variables 'Areapen' and 'Areaint'. A rectangle is then plotted on the colour monitor screen and shaded with the value held in variable 'Areapen'. Figures 3, 4 and 5 show completed maps with offwafer devices being represented by a red rectangle with a diagonal slash. Once the map has been completed a subprogram called [Mapscalenum], line 2787, is called to draw in the device numbers. On completion of the map drawing eight softkeys are defined as follows:-

- f1) :- RETURN TO MAIN MENU
- f2) :- CIRCULAR MAP
- f3) :- SAMPLE MAP
- f4) :- CHANGE MAX-MIN
- f6) :- PLOTTER SHADING
- f7) :- PLOTTER NUMBERS
- f8) :- PRINTER COPY

Softkey f1) performs the same functions as in the histogram routine. Selection of softkey f2) re-plots the wafer map using anisotropic scaling as opposed to the default isotropic scaling. The result of this is to produce a rounded map from an elliptical map. Subprogram [Mapint], line 3192 is called to set up the scaling as determined by Boolean variable 'Circ'.

Selecting softkey f3) re-plots the wafer map using isotropic scaling. Selection of softkey f4) calls subprogram [Maxmin], line 1973. This subprogram allows the maximum and minimum values of the parameter being mapped to be altered. If the maximum value entered is greater than the minimum value entered the wafer map is automatically re-drawn. If the maximum value entered is less than the minimum value then an error is reported and the program will not continue until the maximum and minimum values are entered correctly.

Selection of softkey f6) uses the system plotter to plot the wafer map with shaded rectangles to represent the grey scale intensities. Subprogram [Plotter-shade], line 3275, is called to perform this task.

Selection of softkey f7) draws the plot on the system plotter with numbers instead of intensities to represent the parameter values. The numbers are 1, 2, 3, 4, 5, 6 and 7, with 7 corresponding to white.

Selection of softkey f8) dumps the screen image to the

line printer. It should be noted that the printer image is the inverse of the screen image i.e. white on the screen is black on the printer. Selection of softkey f8) turns off the colour mode used to draw the wafer map and re-draws the wafer map on the screen with a seven level intensity scale. The reason for drawing with intensities is to allow the screen to be dumped to the system printer. With the existing system printers it is not possible to dump full grey scale or colour images but a future option may be to connect the computer to a colour video printer.

The grey scale is inverted on the screen so that the screen dumped image corresponds to the original grey scale wafer map on the screen, the original screen display is automatically recalled on completion of the screen dump.

iv) SELECTION MAPS

Selecting softkey f4) in the main menu calls up a selection mapping routine. This routine allows the operator to specify a particular combination of device parameters and form a device "data sheet". Each device is compared against the "data sheet" and the locations of those which fit are then plotted in the form of a wafer map. The subroutine [Limitmapf], line 2018, is used to carry out this selection process. At present only data files type 'F' (FETs), 'O' (OHMICs), and 'C' (Capacitors) can be selection mapped.

Subroutine [Limitmapf] displays a table containing the "data sheet" parameters alongside the measured maximum and minimum values of each parameter. The parameter to be changed is selected using the mouse and the required maximum and minimum values for that parameter are entered using the keyboard. The selected maximum and minimum limits are stored in a variable array called 'Lim2'. Subroutine [Passvalues], line 906, uses the array 'Lim2' to determine which devices pass the selected limits. The results are stored in an array called 'Passval'. A device that fails the selected limits is given the value -20 whilst a device that passes is given a value of 1.

Once the subroutine [Passvalues] has been completed subprogram [Mapping_limits], line 2697, is called. This subprogram plots the array 'Passval' in the form of a wafer map. Once the map has been plotted eight softkeys are allocated from which the user can select the following options:-

- f1) :- RETURN TO MAIN MENU
- f2) :- CHANGE LIMITS
- f3) :- RESET LIMITS
- f4) :- PRINTER COPY OF DEVICES PASSED
- f5) :- SELECT DEVICE
- f7) :- PLOTTER COPY
- f8) :- PRINTER COPY

Selection of softkey f2) permits the maximum and minimum pass/fail limits to be changed again if required. The pass/fail limits can be reset to the default maximum and minimum values by selection of softkey f3).

A printer copy of the measured data for all the devices which fit the "data sheet" can be obtained by selecting softkey f4). Selection of softkey f5) stores the screen map in an array called 'Gscreen'. A routine is then entered which allows selection of an individual device from the plotted map. Selection of a device is made via the mouse and subprogram [Pickdev], line 2634. Only a device that has passed can be chosen. Once a device has been selected the following options are available:-

- f1) :- RETURN TO MENU
- f4) :- PRINT DEVICE DATA
- f5) :- IDS PLOT
- f6) :- SELECT DEVICE
- f8) :- PRINTER COPY

Softkey f4) provides a printout of the measured data for the device selected. Selection of softkey f5) is only possible if the data is of type 'F' ie, FET measurement data. If softkey f5) is selected with a FET data file then a simplified characteristic curve of the device is plotted on the screen. An example of this simplified curve is shown in figure (19). A printer copy of the screen picture can be obtained by selecting softkey f8). Selection of softkey f6) redraws the memorised selection wafer map from array 'Gscreen' and allows another device to be selected. Softkey f7) provides a plotter copy of the screen picture.

v) SCATTER PLOTTING

Data files containing at least two measured parameters can be scatter plotted. When the scatter mode is selected the operator is instructed to select the 'X' axis parameter. This is achieved in line 501 where subroutine [Paramchange] is called. The operation of subroutine [Paramchange] is described in the section on Histogram plotting. After selecting the 'X' axis parameter the array called 'Passval' is used to hold the measured data. The program then asks the operator to select the 'Y' axis parameter. The 'Y' axis measured data is retained in the array 'Fetval'.

After choosing the parameter axes subprogram [Scattermap], line 1732, is called. This subprogram scales and sets up the axes and then plots the selected parameters against each other. On completion of the plot the following scatter mode menu is active via the softkeys:-

```

f1) :- RETURN TO MAIN MENU
f2) :- RESET RE-PLOT
f3) :- LOG X/Y AXES
f4) :- EXPAND X/Y AXES
f5) :- CHANGE PARAMETER
f6) :- OVERDRAWMODE
f8) :- PRINTER COPY

```

Selection of softkey f1) aborts the scatter plotting mode and returns the program to the main menu. Selection of softkey f3) redraws the scatter plot with logarithmic axes. Both axes at present are drawn with logarithmic scales. Selection of softkey f4) calls subprogram [Entermaxmin] to change the 'X' or 'Y' axis scaling. Figure (10) is a photo of the screen display of a typical scatter plot. Selection of softkey f6) allows the operator to enter a different data file and overlay the data stored on screen with the new data. Selection of softkey f2) cancels the overdrawmode and resets the screen to a scatter plot of the parameters selected for the last data file entered.

vi) FAILURE MAPS

This option plots a map of the devices which were classed as failed devices during the original probing run, the map also identifies the nature of the failure. If the devices are FETs then the array 'Fetval' is automatically filled with the values of the 'Vpinch' array. As described in part 1 of this memo failures are identified by suitable tokens which are stored in the 'Vpinch' array. Subprogram [Failuremap], line 2163, plots the failure map. Coloured rectangles are used to distinguish the different failures. Figure (6) is a photo of the screen display. If a printer copy is requested then subprogram [Printfailmap], line 2877, is called and instead of coloured squares to identify failures, characters are used. Once a failure map has been plotted the following softkeys are redefined for the failure map mode:-

```

f1) :- RETURN TO MAIN MENU
f2) :- CIRCULAR MAP
f3) :- SAMPLE MAP
f6) :- PLOTTER COLOUR
f7) :- PLOTTER LETTERS
f8) :- PRINTER COPY

```

Selection of softkey f6) calls subprogram [Color_failmap], line 3399. This subprogram produces a failure map on the system plotter using coloured rectangles and shading to distinguish between different failures. Figure (21) shows an example of the coloured plotter failure map. Selection of softkey f7) produces an alternative plotter output using the same character set as the printer. A typical plotter display is shown in figure (20).

vii) C/V MEASUREMENTS

If a data file type 'P' (C/V measurement) has been selected subprogram [Cvplot] is automatically loaded and executed. This subprogram starts by reading the disc data file and placing the measured data into a variable array called 'Cv'. A subroutine called [Cvmap], line 300, is then called which plots a wafer map of the devices measured. Devices with valid measurement data are distinguished by being plotted with blue rectangles. The following options are available when the wafer map has been plotted:-

- f1) :- RETURN TO MAIN MENU
- f2) :- Nd MAP
- f3) :- CHANGE AREA
- f4) :- Cv DATA MAP
- f5) :- SELECT DEVICE
- f8) :- PRINTER COPY

Selection of softkey f1) aborts the CV plotting routine and returns the program to the main menu. Selection of softkey f2) plots a grey scale Nd map using subprogram [Mapsub] as described under Grey Scale mapping. The Nd values displayed are calculated using the zero bias data only. The map scale is derived by subtracting the minimum Nd value from the maximum Nd value and dividing the result by 7. The default area, variable 'Area' used in the CV calculations [Calcv], line 509, is 1.5 E-4 cm^2 . Selection of softkey f3) allows this area to be changed. Selecting softkey f5) calls subprogram [Pickdev] which utilises the mouse to select a specific device. Only devices with valid data are allowed to be selected by the program.

Once a device has been selected, two softkeys are redefined as follows:-

- f4) :- Nd Profile
- f5) :- Cap/Volt Plot

Selection of softkey f4) calls subroutine [Calcv], line 509 which calculates the Nd data and stores the results in an array called 'Nd' and an array called 'Depth'. Subroutine [Cvdraw], line 432 is then called and 'Nd/cc' is plotted against 'Depth'. On completion of the 'Nd/cc' plot a submenu [Submenu1], line 108, is available to select any of the following options.

- f1) :- CV Menu
- f3) :- X-Y Axis Expand
- f4) :- Add Etch Step
- f5) :- Overlay Allplots
- f8) :- Printer Copy

Selection of softkey f1) returns the program to the original CV Menu options, line 44. Softkey f3) uses Subprogram [Entermaxmin] to allow selected regions of the data to be plotted. Softkey f4) allows the etch step variable 'Etstep' to be changed. The default value for the etch step is 0. Softkey f5) allows all the valid device data to be overlayed on one plot. Softkey f8) provides a printer copy of the screen picture.

Selecting the Cap/Volt Plot option using softkey f5), plots the measured capacitance against the measured voltage of a selected device. Subroutine [Capvoltplot], line 375 is used to plot the capacitance/voltage data with the selected device number stored in variable 'Devnum'. On completion of the plot the softkeys are redefined as follows [Submenu2], line 197.

```
f1) :- CV Menu
f3) :- X-Y Axis Expand
f5) :- Overlay Allplots
f8) :- Printer Copy
```

These options perform the same functions as those described under [Submenu 1].

viii) DETAILED FET V/I

When a data file type 'V' (FET voltage - current characteristic) has been selected the program automatically loads and executes subprogram [Viplot]. The subprogram starts by entering all the measured data from the type 'V' disc data file into an array called 'Reading'. The measured voltage and current values are then extracted from the array 'Reading' and placed in arrays 'Vds' for voltage values and 'Ids' for the current values. The softkeys are then defined with the following options:-

```
f1) :- RETURN TO MENU
f2) :- IDS/VDS PLOT
f3) :- GM/VGS PLOT
f4) :- IDS/VGS PLOT
f5) :- GM/IDS PLOT
f8) :- PRINTER COPY
```

Selection of softkey f1) aborts subprogram [Viplot] and returns the program to the main menu.

Softkey f2) IDS/VDS PLOT:- This calls subroutine [Vidraw], line 282, to plot the measured drain-source voltage against the drain- source current.

Softkey f3) GM/VGS PLOT:- Selection of this option first requires a drain-source voltage to be selected. Subroutine [Selectvds], line 101, allows selection of one of the following voltages 1.5 V, 2 V, 2.5 V, 3 V, 3.5 V, 4 V,

4.5 V and 5 V. The selected voltage is stored in variable 'Voltds'. Having selected a voltage, subroutine [Gmplot], line 181, is then called. The 'Gm' is calculated by subtracting two consecutive values from the array 'Ids' and dividing the result by the measurement voltage step, variable 'Vstep'. This is repeated for all the records and the results stored in the array called 'Gmp'. The subroutine [Gmplot] then plots the Gm values from the array 'Gmp' against the gate voltage. It should be noted that the gate voltages are not directly measured during probing and the variable 'Vstep' contains the increments called up by the probing computer.

Softkey f4) IDS/VGS PLOT:- Selection of this option first requires the operator to select a drain-source voltage as previously described. Subroutine [Vgplot], line 139, is then called to plot the drain-source current against the gate-source voltage.

Softkey f5) GM/IDS PLOT:- Selection of this option first requires the operator to select a drain-source voltage as previously described. The subroutine [Gidsplot], line 232, is then called to plot the Gm against the drain-source current. The Gm values are calculated as described under "Gm/Vgs" plot.

ix) DIODE FORWARD I/V

When a data file type 'I' has been selected the program automatically loads and executes subprogram [Ideal]. The subprogram starts by entering all the measured data from the type 'I' disc data file into an array called 'Id'. Each element of the array contains the measured I/V data for one diode. Subroutine [Idmap], line 452 is then called to display a wafer map on the screen. Devices with valid measurement data are distinguished by being plotted with blue rectangles. The following options are available upon completion of the wafer map:-

- f1) :- RETURN TO MAIN MENU
- f3) :- HISTOGRAMS
- f4) :- MAPS
- f5) :- SELECT DEVICE
- f8) :- PRINTER COPY

Selection of softkey f1) aborts the subprogram and returns the program to the main menu. Selection of softkey f3) and softkey f4) call the subprogram [Histogram] and grey mapping subprogram [Mapsub]. Before either histograms or grey scale maps can be produced the subroutine [Fillarray] is used to calculate the Ideality factor, Barrier height and Diode series resistance for each device measured. [Fillarray], line 258, uses the automatic line fitting routine [Autocurve], line 169, to determine the slope and intercept of the linear portion of the diode characteristic for each

individual device measured. In order to determine the best straight line fit to the measured device data [Autocurve] splits the data into consecutive groups of ten readings. The least squares program functions, [Lsq1] and [Lsq2] are used to determine the intercept, slope and deviation of each of these groups of readings. The best straight line fit to the linear region of the diode characteristic is assumed to be the line fitted to the group with the smallest deviation. The Barrier Height and Ideality are obtained using the program functions [Ideal_ity] and [Barrier_hgt]. The voltage difference, at the maximum forward current, between the value predicted by this fitted line and the actual value measured is divided by the maximum forward current to give the diode series resistance. When the curve fitting and parameter calculation for each of the devices measured is complete a Boolean variable 'Devdata' is set True, this then enables the Histogram and Mapping subprograms. Histograms and Maps of Ideality Factor, Barrier Height and Diode Resistance can be produced.

Selection of softkey f5) labelled 'Select Device' calls subprogram [Pickdev] which utilises the mouse to select a specific device. Providing the device selected contains valid data then the program calls subroutine [Plotideal], line 327. This subroutine plots the device current/voltage characteristic on the screen, see fig (15). On completion of the plot the following options are available:-

- f1) :- I/V MENU
- f3) :- AUTO CURVEFIT
- f4) :- MANUAL CURVEFIT
- f5) :- CHANGE AREA
- f6) :- SELECT DEVICE
- f7) :- PLOTTER COPY
- f8) :- PRINTER COPY

Selection of softkey f1) returns the subprogram to the initial set of options previously described. Selecting softkey f3) calls [Autocurve] which carries out the curve fitting and parameter calculations described earlier in this section and obtains values of the Barrier Height, Ideality and Diode Resistance for the device. A plot of the fitted diode equation is then drawn superimposed on the measured data and the Barrier Height, Ideality, Diode Resistance, correlation coefficient for the linear region and fitting coefficient for the complete characteristic are displayed in the data panel. The fitting coefficient displayed is the sum of the absolute values of the differences between the measured and fitted voltages.

Selecting softkey f4) allows the operator to define the region over which the straight line fitting is to be carried out. The program performs a least squares straight line fit to all the data points within the selected region. The diode parameters and fitting coefficients are displayed in

the data panel as before.

x) TRANSMISSION LINE OHMIC MEASUREMENTS

When a data file type 'R' has been selected the program automatically loads and executes subprogram [Transline]. The subprogram starts by entering all the measured data into four array's called 'Arry20', 'Arry15', 'Arry10' and 'Arry5'. Subroutine [Caltrans], line 422, is then called to calculate the Contact Resistance, Specific Contact Resistance and Ohms Per Square values for each set of valid readings. Subroutine [Caltrans] performs a least squares fit on the data as shown by program lines 434, 435. These values are stored in arrays called 'Conres', 'Spcon' and 'Ohmsq'. A subroutine called [Devmap], line 346 is then entered to display a wafer map, on the screen, of devices with valid data. Devices with valid measurement data are distinguished by being plotted with blue rectangles. The following options are available upon completion of the wafer map.

- f1):- RETURN TO MENU
- f2):- CHANGE GAP SIZE
- f3):- HISTOGRAMS
- f4):- MAPS
- f5):- SELECT DEVICE
- f6):- DEVICE OVERLAY
- f8):- PRINTER COPY

Selection of softkey f2) allows the default gap sizes of 20 microns, 15 microns, 10 microns, 5 microns and the default width of 100 microns to be changed in variables 'G20', 'G15', 'G10', 'G5' and 'Wide'. Selection of softkey f3) calls subprogram [Histogram]. Selection of softkey f4) calls subprogram [Mapsub]. Both of these subprograms have been described previously in this memo. Histograms and Grey Scale maps of the following parameters can be plotted: 20 microns, 15 microns, 10 microns, and 5 microns gap resistances, the Contact Resistance, Specific Contact Resistance and Ohms per Square of the semiconductor between the ohmic pads.

Selection of softkey f5) calls subprogram [Pickdev] which utilises the mouse to select a specific device from the wafer map. Upon selection of a device subroutine [Plottrans], line 198 is entered. This subroutine plots the measured four gap ohmic readings together with the best straight line fit to the data, see figure (22). A correlation coefficient is calculated and displayed on the plot.

Selection of softkey f6) uses subroutine [Plottransall], line 250. This subroutine provides a screen plot of all the valid device gap resistances together with the best straight line fits all on one plot. Figure (23) shows an example of the overlaid screen plot. Subroutine

[Plattransall] also initialises array 'Passval' with all the calculated correlation coefficients. The array can be analysed in the Histogram and Grey scale mapping subprograms. The Boolean variable 'Correlation' is used to enable the 'Passval' array.

xi) DATA CONVERSION

The program that converts disc data files from the HP86 computer to the Series 300 computer is called [Convertdat]. This is a complete program which is loaded automatically from the display program when selected. The program starts by first reading the disc data file called [Directory] and converting it to the Series 300 format. Subprogram [Datamenu], line 640, uses the directory to display the disc data file information on the screen. Selection of a data file is made by moving a white band over the file name via the mouse. On selection of a data file the following options are available:-

- f1):- CONTINUE & CONVERT
- f7):- RE-SELECT
- f8):- RE-START

On selecting softkey f1) various error checking routines ensure valid data discs, valid directories and no duplicate file names exist. The actual conversion subprogram is called [Conversion], line 718. Default data file record lengths are given to variable 'Reclength' as described in part 1 of this memo. The subprogram initially converts the first two numbers of the data file i.e. number of columns 'Xcol' and number of rows 'Yrow'. From these variables the total number of numbers to be converted is calculated. Subroutine [Convertnum], line 805, actually converts the numbers. On completion of the number conversion the data is stored on a Series 300 data disc with the corresponding directory information updated. The following options are then available:-

- f1):- SELECT & REPEAT
- f2):- CHANGE 86 DATA DISC
- f5):- READ 300 DIRECTORY
- f6):- DELETE FILE
- f8):- ANALYSE DATA

Selecting softkey f8) aborts the conversion program and automatically re-loads the display program [Displaydat].

6) CONCLUSIONS

The decision to separate the two functions of the auto prober system has proved sound and has effectively removed the bottleneck at the measurement stages of wafer processing. The sophisticated graphics available have proved ideal for displaying data and the speed of the HP300 computer has allowed a useful

interactive facility to be realised. The technique of accessing the display options by selection from a menu made very stringent demands on the structure of the software but the resulting facility has proved effective and popular as well as being easy to use. At the present time the hard copy printouts of screen maps do not reflect the quality and impact of the actual screen displays and this aspect of the facility deserves further investigation.

The system described in these two memos has been in regular use for the past eighteen months and has proved to be an invaluable tool in the device and device technology program of the division. The large increase in the speed at which devices are measured has enabled full device data to be gathered on large wafers allowing fine detail as well as general trends to be investigated. An additional benefit of the system has been the increased precision of the data compared to that previously obtained using a manual curve tracer. In addition to the speed and precision benefits of the measurement system the computer data handling has allowed full advantage to be taken of the large volume of high quality data available. The complete system has now become an essential part of the DP2 processing facilities.

7) ACKNOWLEDGEMENTS

Although all the software described in these memos was written specifically for this autoprobing system three of the routines used are based on sections of programs which already existed within DP2 Division. We would like to acknowledge these contributions from the following individuals: J Birbeck, D Lee and J Smith for the routine used to extract Nd and depth in the C/V profiling programs, K Hilton and G Pryce for the basis of the curve fitting routine used in the diode I/V measurements and J Gaskell for supplying the routine originally used to convert the data from HP86 format to HP300 format. Finally we would like to acknowledge the helpful discussions with J Woodward and the co-operation of the rest of the processing section in carrying out the field testing of the system.

8) REFERENCES

- Ref (1) R E Williams, "Gallium Arsenide Processing Techniques", publ. by Artech House, inc. 1984.
- Ref (2) V L Rideout, Thin Solid Films, 48 (1978) 261-291.
- Ref (3) S M Sze, "Physics of Semiconductor Devices", 2nd Ed. publ. by Wiley-Interscience, 1981.

 


FIGURE 1 TYPICAL HISTOGRAM PLOT OVER FULL DATA RANGE

 


FIGURE 2 DETAILED HISTOGRAM PLOT OVER SELECTED DATA RANGE

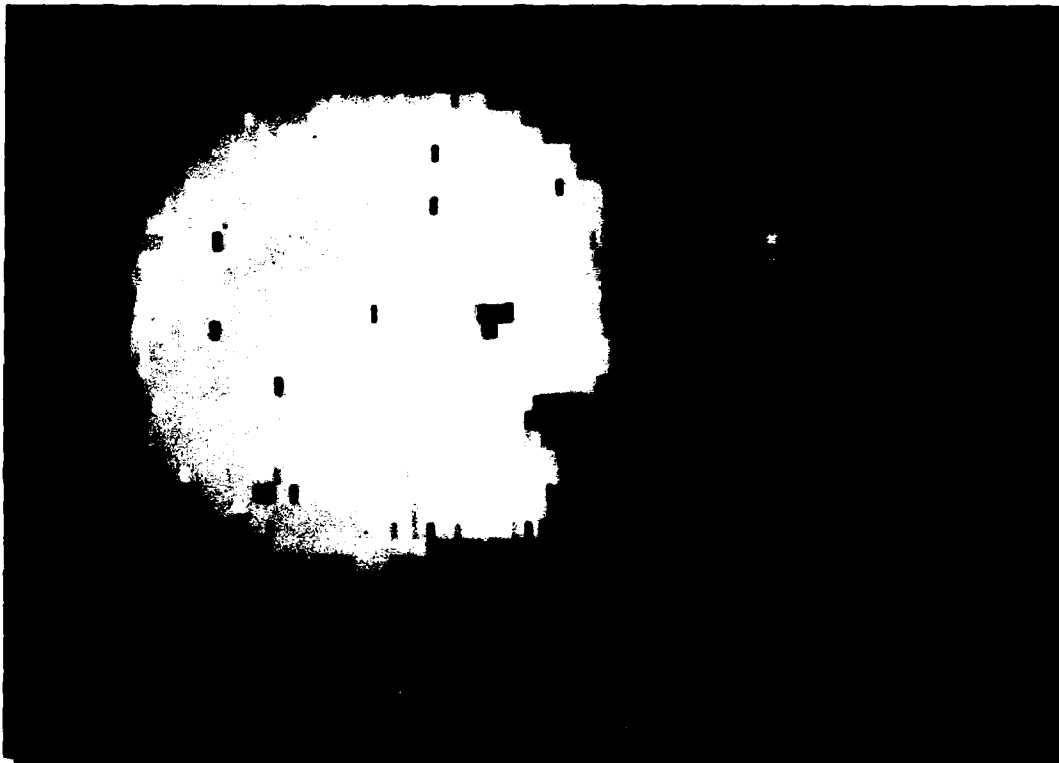


FIGURE 3 GREY SCALE MAP OVER FULL DATA RANGE

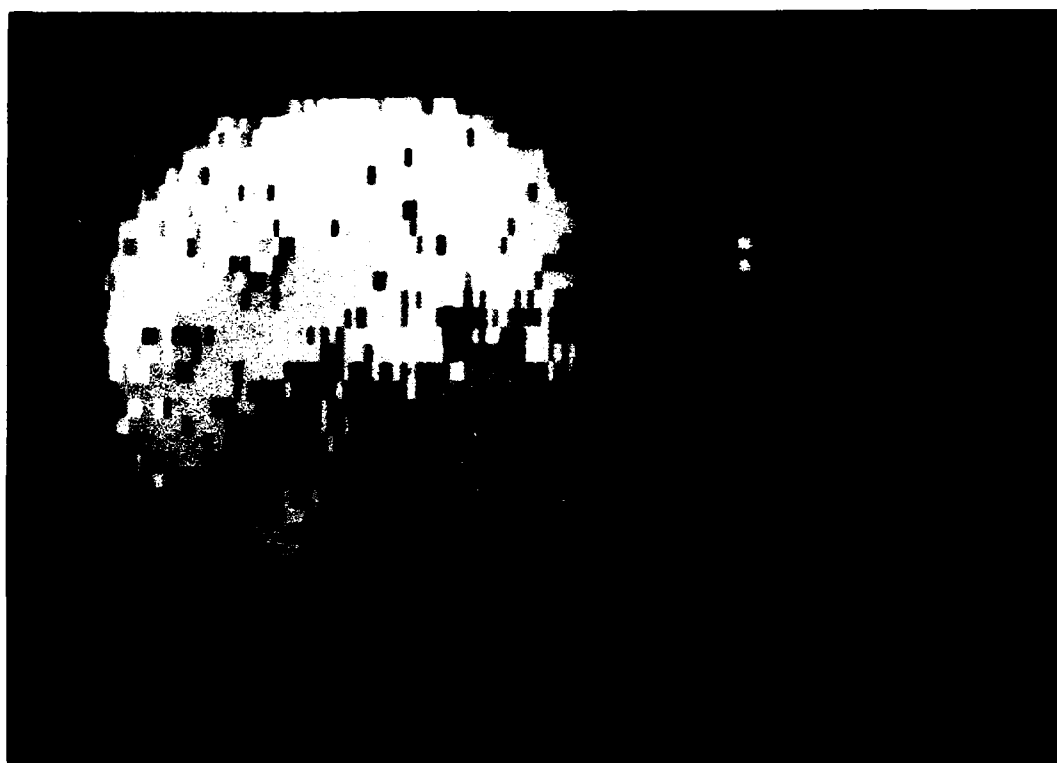


FIGURE 4 GREY SCALE MAP, DATA RANGE FROM 10 mA TO 80 mA

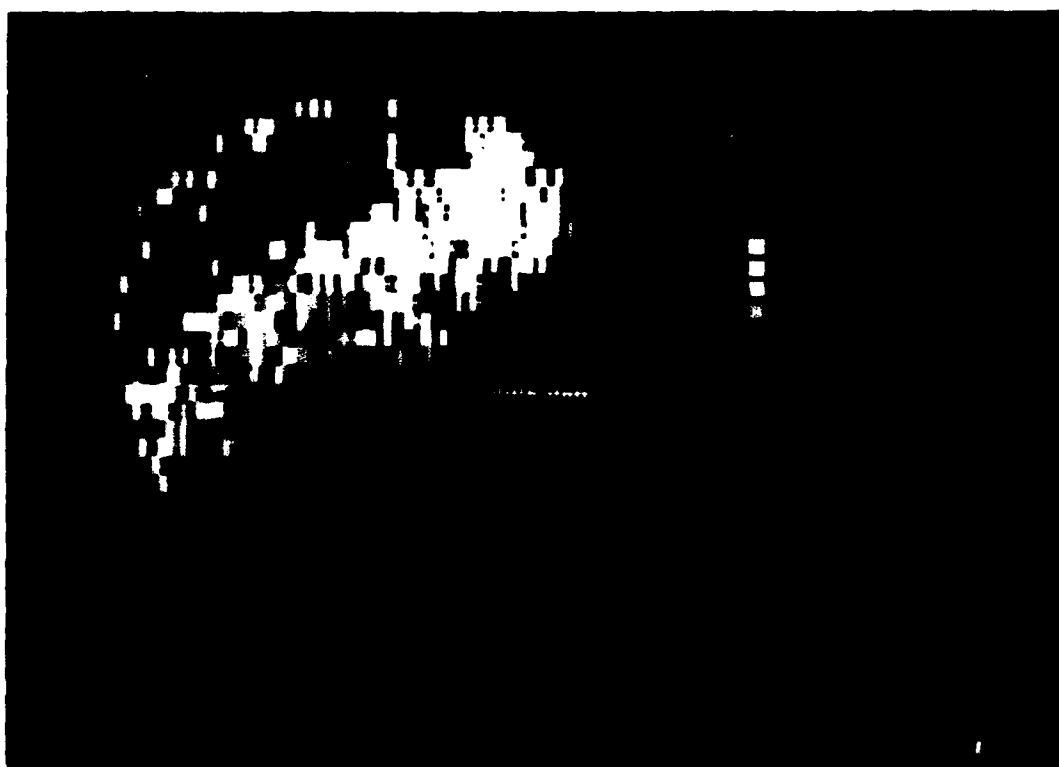


FIGURE 5 GREY SCALE MAP, DATA RANGE FROM 30 mA TO 40 mA

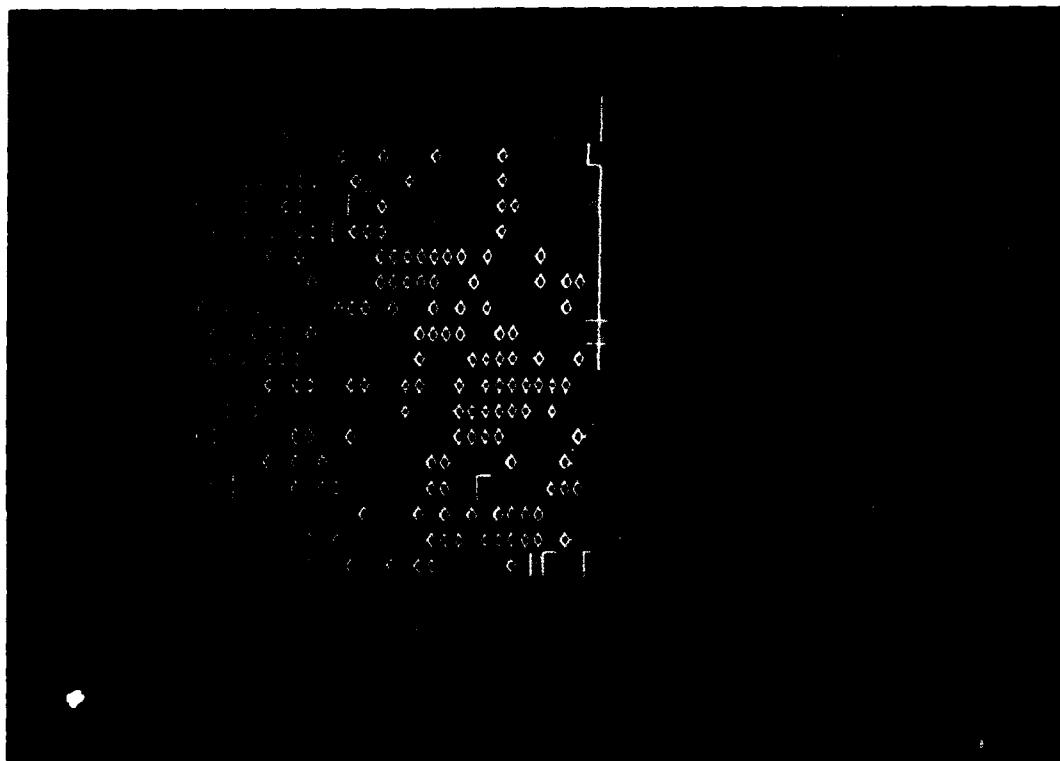


FIGURE 6 EXAMPLE OF FAILURE MAP

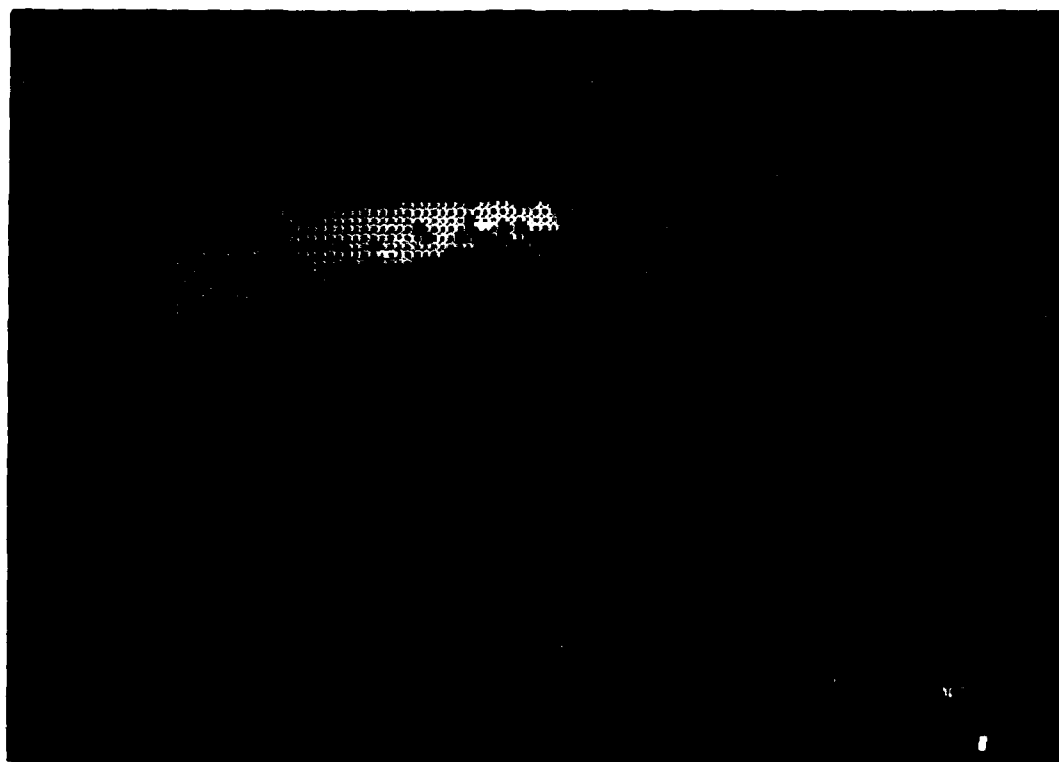


FIGURE 7 FET SELECTION MAP FOR I_{DSS0} RANGE 20 mA TO 30 mA

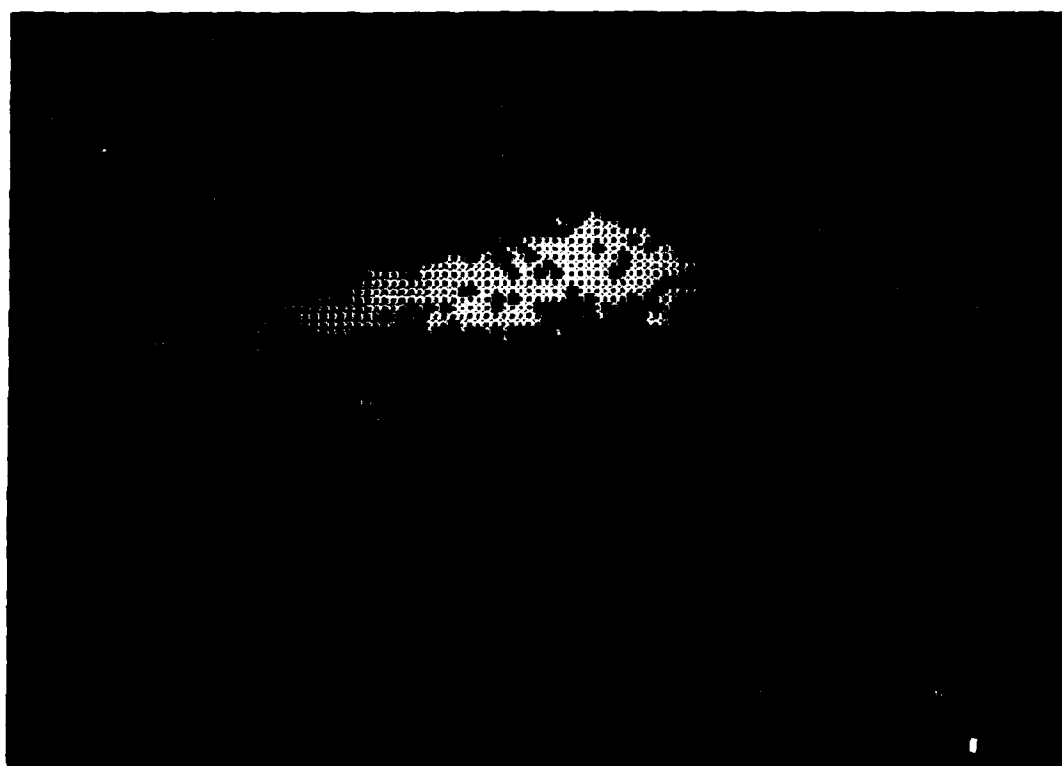


FIGURE 8 FET SELECTION MAP FOR I_{DSS0} RANGE 30 mA TO 40 mA

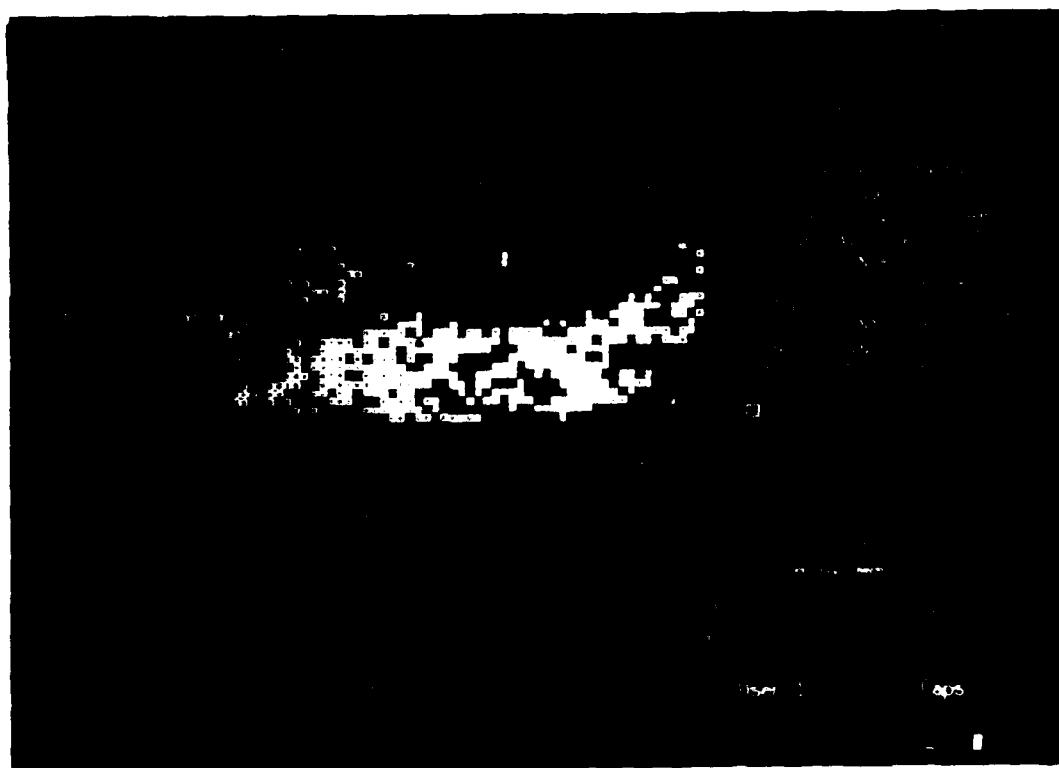


FIGURE 9 FET SELECTION MAP FOR I_{DSS0} RANGE 40 mA TO 50 mA

 


FIGURE 10 TYPICAL SCATTER PLOT


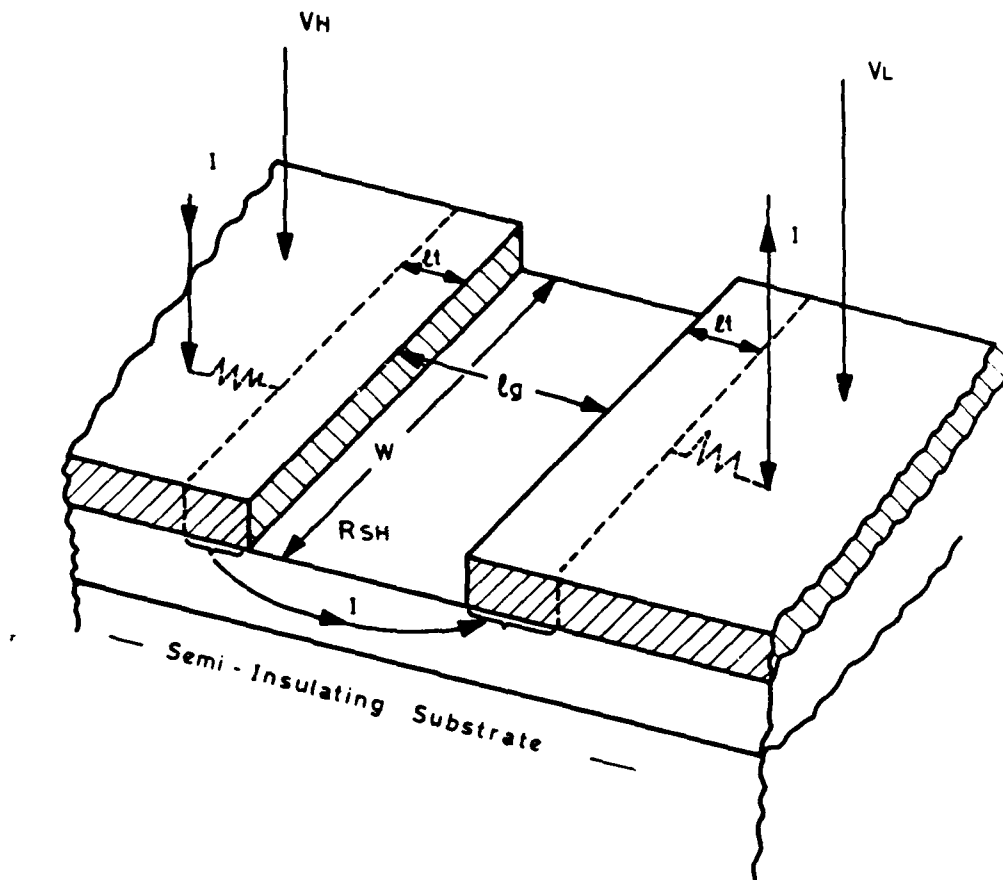


FIGURE 11 CONTACT RESISTANCE MEASUREMENT

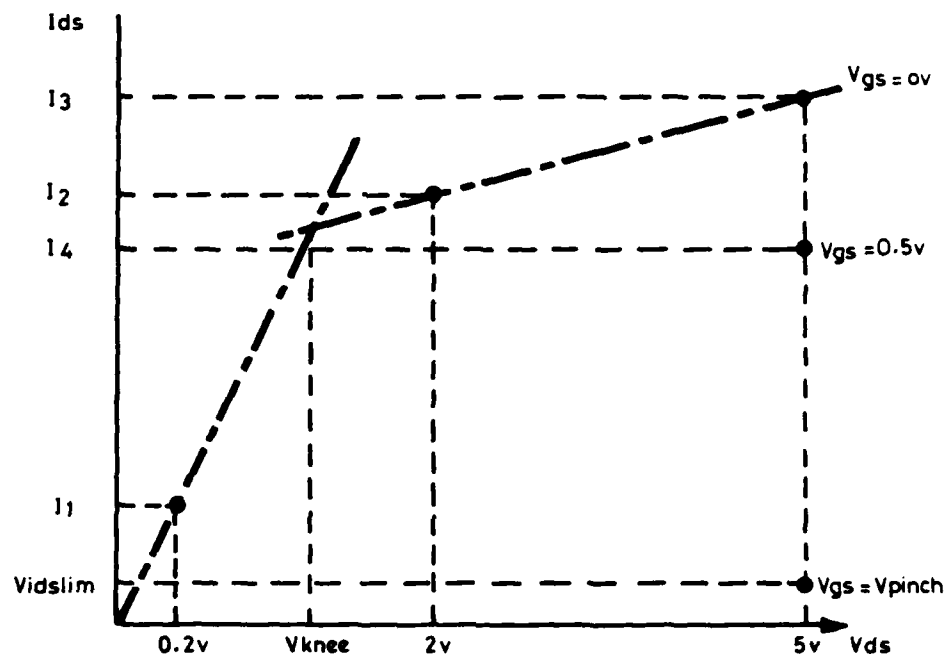


$$R_{slope} = \frac{0.2}{I_1} \quad ; \quad G_d = \frac{(I_3 - I_2)}{5 - 2} \quad \therefore I_{dss0} = I_3$$

$$g_m = 2(I_3 - I_4)$$

FIGURE 12 DEFINITION OF MEASURED FET PARAMETERS

13 Jul 1987 EPI LAYER MRS14 FET100 NO 4611

F1004611V IDS/VDS CURVE

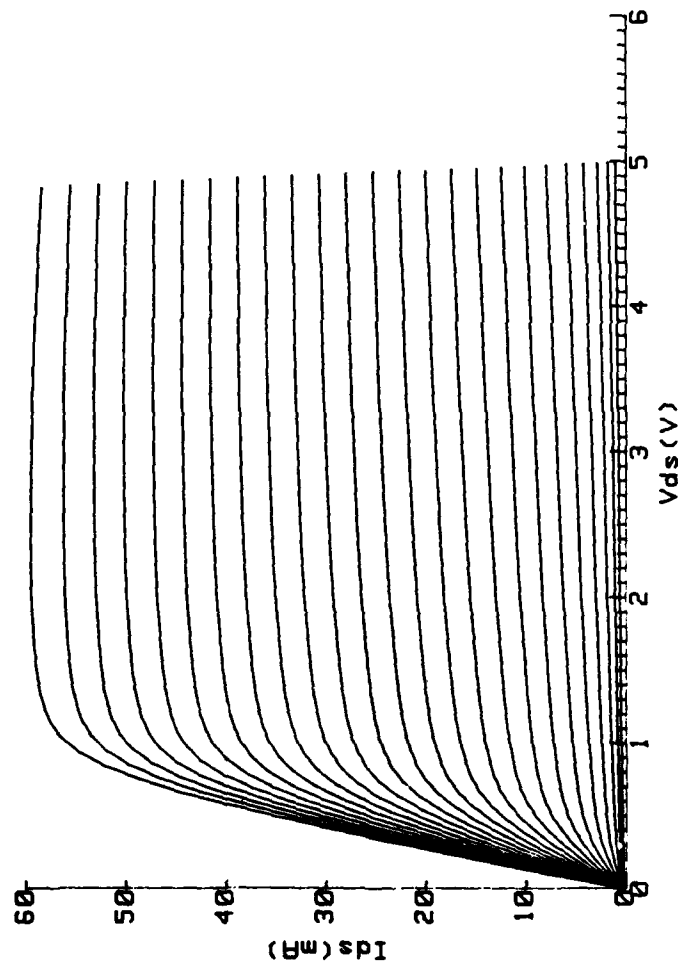

RSLOPE=13.36 OHM
IDSS0 =58.32mA
GD =.01mS
VKNEE =.7844V
GM =28.09mS
IGATE =.095uA
IDSS4 =.009mA
VPINCH=1.6V

VOLTAGE STEP=.1V


Probed by:-BTH
Probed on:-04/11/86
TIME:-11:18:06
-DP2 DIVISION-
-RSRE MALVERN-

FIGURE 13 DETAILED FET CHARACTERISTICS, I_{ds}/V_{ds} PLOT

13 JUL 1987 EPI LAYER MR514 FET100 NO 4611

F1004611V
Ids/Vgs PLOT

VDS=5V

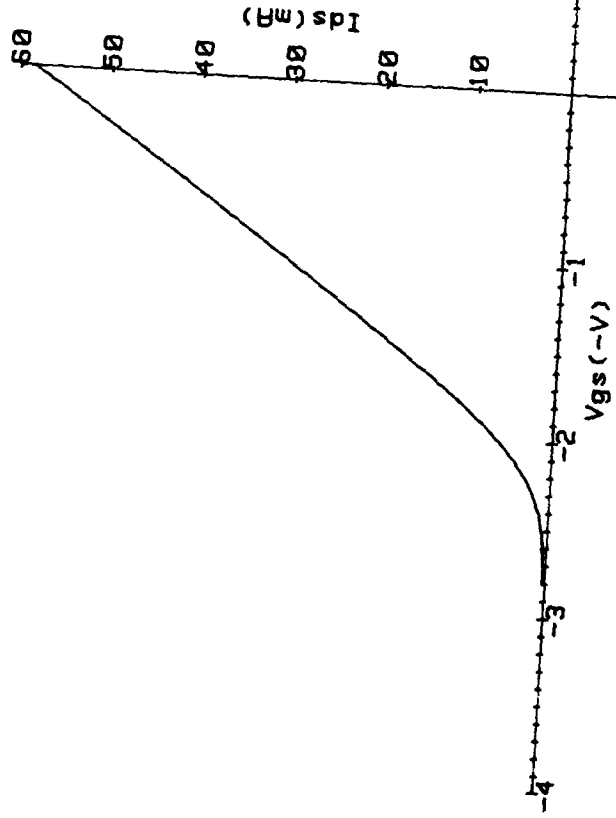

Probed by: -BTH
+1 Probed on: -04/11/86
TIME: -11:22:14
-DP2 DIVISION-
-RSRE MRLVERN-

FIGURE 14 DETAILED FET CHARACTERISTICS I_{DS}/V_{GS} PLOT


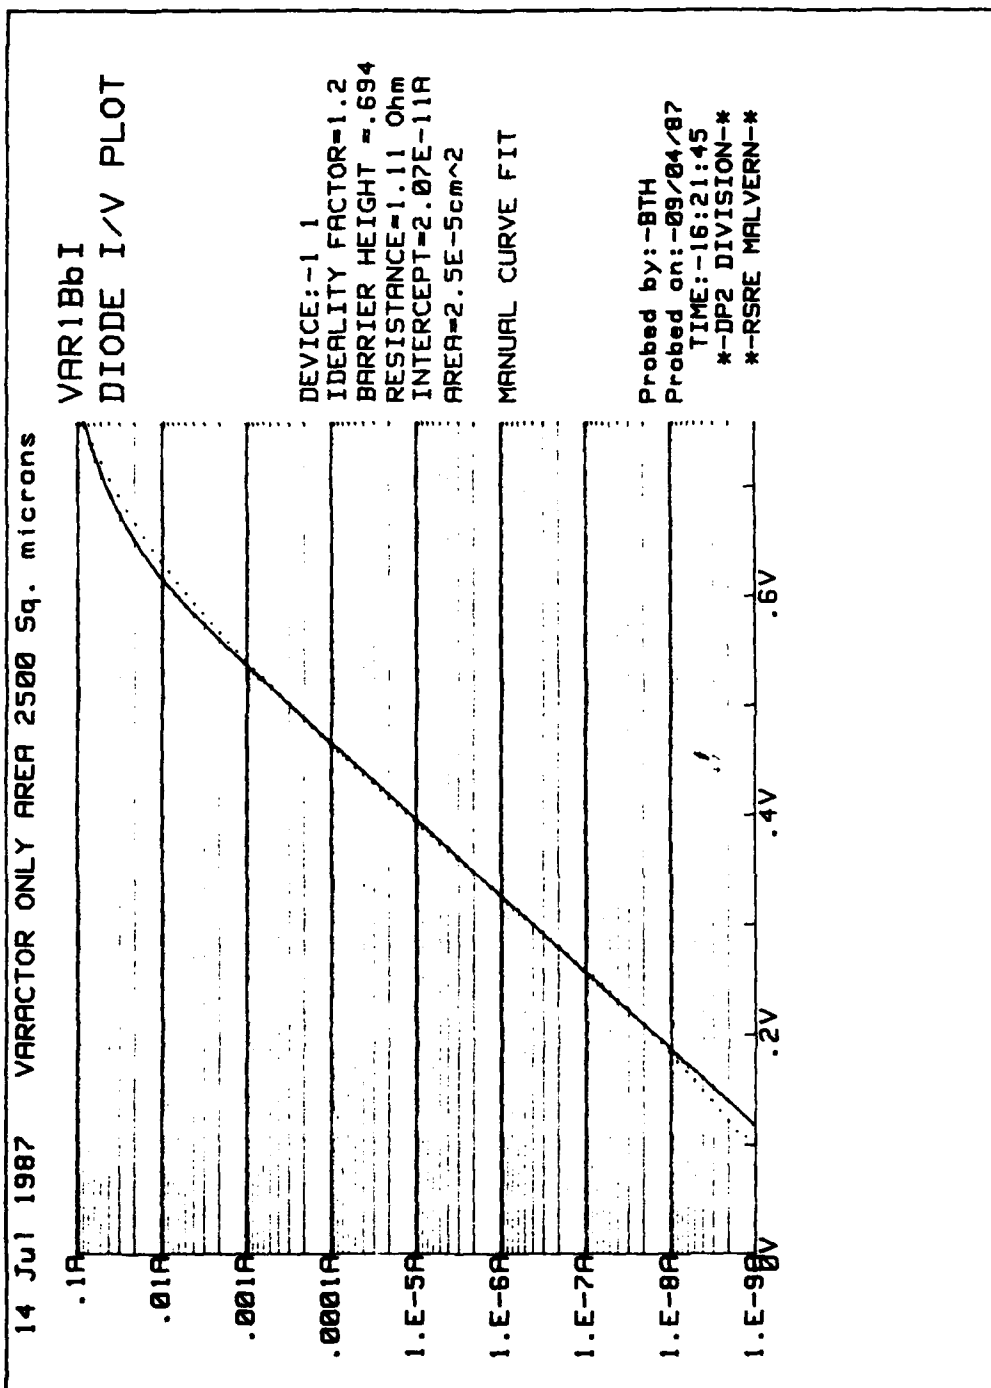


FIGURE 15 DIODE FORWARD CHARACTERISTIC PLOT

27 Jul 1987 RH FATFET ON MMT78 26BT EVERY FOURTH DEVICE

MT7826P

Nd PROFILE

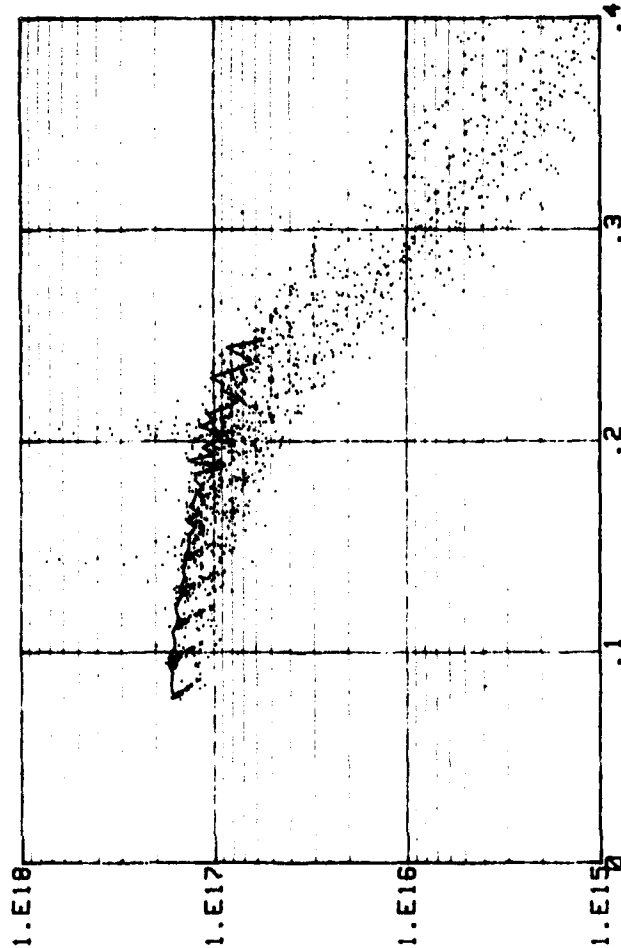

DEVICE NUMBER

16 16

Nd/cc

Plotted against

Depth(Microns)

ETCH:-0uM

FREQUENCY:-.01MHz

AREA:-.00015cm^2

Probed by:-BTH

Probed on:-07/05/86

TIME:-14:33:02

-DP2 DIVISION-

-RSRE MFLVERN-

FIGURE 16 OVERLAY OF FATFET C/V PROFILES

 


FIGURE 17 EXAMPLE OF MENU DISPLAY BEFORE A DATA FILE HAS BEEN SELECTED

 


FIGURE 18 EXAMPLE OF MENU DISPLAY AFTER A DATA FILE HAS BEEN SELECTED

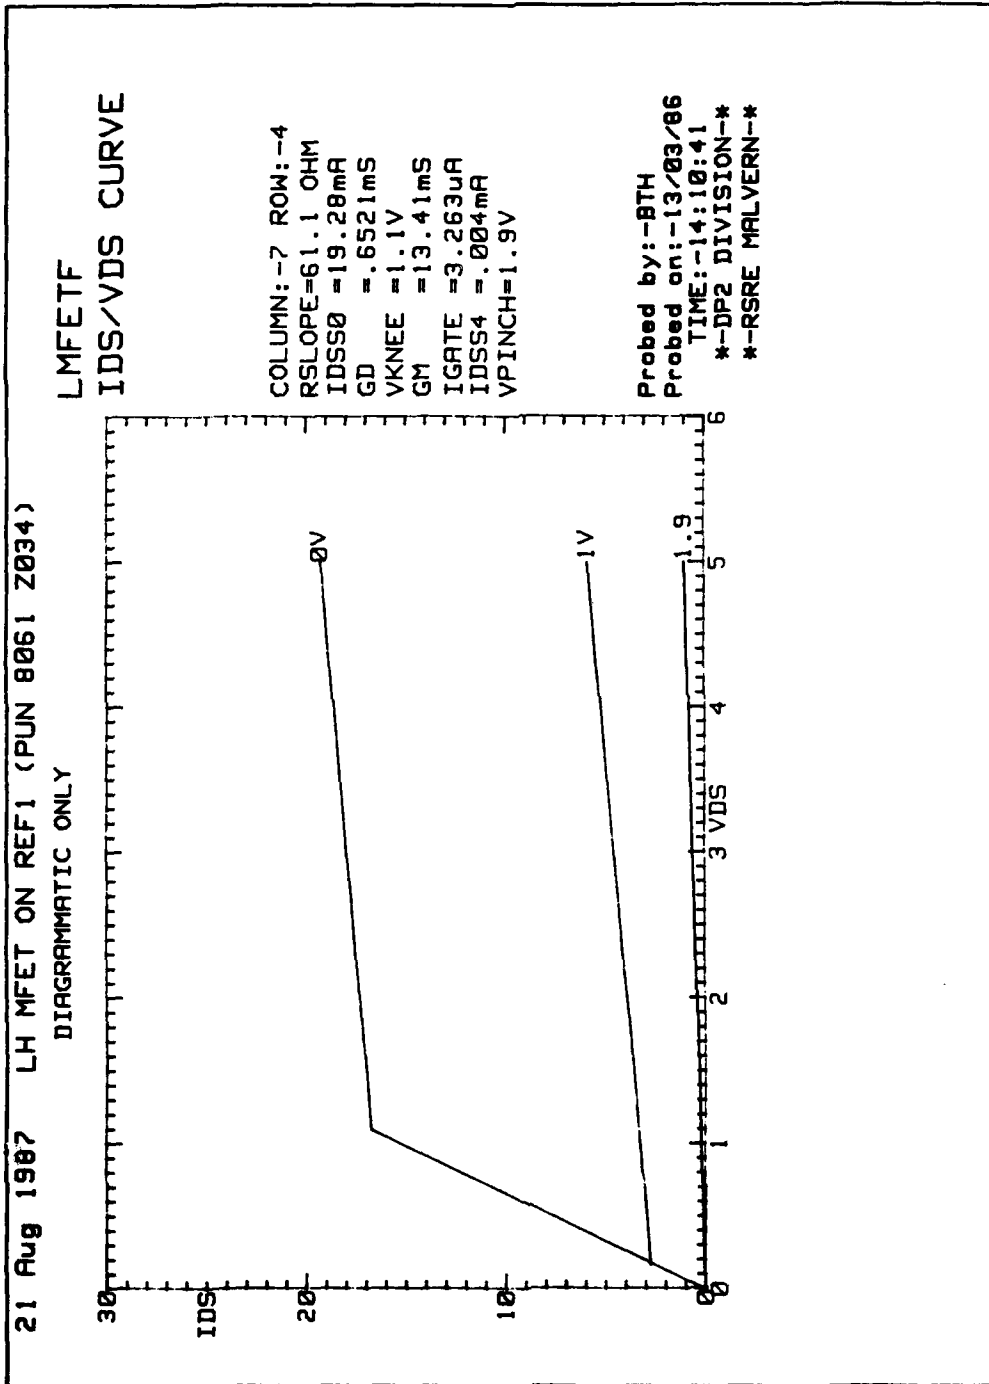


FIGURE 19 EXAMPLE OF DIAGRAMMATIC I_{DS}/V_{DS} CURVE OF FET OBTAINED IN SELECTION MAP MODE

የጥቅምተኛው ቁጥር	የጥቅምተኛው ስም	የጥቅምተኛው አድራሻ	የጥቅምተኛው ስም	የጥቅምተኛው አድራሻ	የጥቅምተኛው ስም	የጥቅምተኛው አድራሻ
24	ገብረ	ገብረ	ገብረ	ገብረ	ገብረ	ገብረ
23	ገብረ	ገብረ	ገብረ	ገብረ	ገብረ	ገብረ
22	ገብረ	ገብረ	ገብረ	ገብረ	ገብረ	ገብረ
21	ገብረ	ገብረ	ገብረ	ገብረ	ገብረ	ገብረ
20	ገብረ	ገብረ	ገብረ	ገብረ	ገብረ	ገብረ
19	ገብረ	ገብረ	ገብረ	ገብረ	ገብረ	ገብረ
18	ገብረ	ገብረ	ገብረ	ገብረ	ገብረ	ገብረ
17	ገብረ	ገብረ	ገብረ	ገብረ	ገብረ	ገብረ
16	ገብረ	ገብረ	ገብረ	ገብረ	ገብረ	ገብረ
15	ገብረ	ገብረ	ገብረ	ገብረ	ገብረ	ገብረ
14	ገብረ	ገብረ	ገብረ	ገብረ	ገብረ	ገብረ
13	ገብረ	ገብረ	ገብረ	ገብረ	ገብረ	ገብረ
12	ገብረ	ገብረ	ገብረ	ገብረ	ገብረ	ገብረ
11	ገብረ	ገብረ	ገብረ	ገብረ	ገብረ	ገብረ
10	ገብረ	ገብረ	ገብረ	ገብረ	ገብረ	ገብረ
9	ገብረ	ገብረ	ገብረ	ገብረ	ገብረ	ገብረ
8	ገብረ	ገብረ	ገብረ	ገብረ	ገብረ	ገብረ
7	ገብረ	ገብረ	ገብረ	ገብረ	ገብረ	ገብረ
6	ገብረ	ገብረ	ገብረ	ገብረ	ገብረ	ገብረ

FET102AF
FAILURE MAP


```

o :- INVALID DATA
[ ] :- OFF WAFER
R-RSLOPE >500 OHM
S=SHORT <1 OHM
I-IDSS0 >200 mA
D=Gd FAIL
K=VKNEE >3 V
T=Gm <.2 mS
G=GATE I >100 uA
V=VPINCH >4V @20mA
◇ DEVICES PASSED

```

Probed by:-JTP
Probed on:-02/06/07
TIME:-09:47:15
*-DP2 DIVISION-#
*-RSRE MALVERN-#

FIGURE 20 PLOTTER COPY OF FAILURE MAP USING CHARACTERS

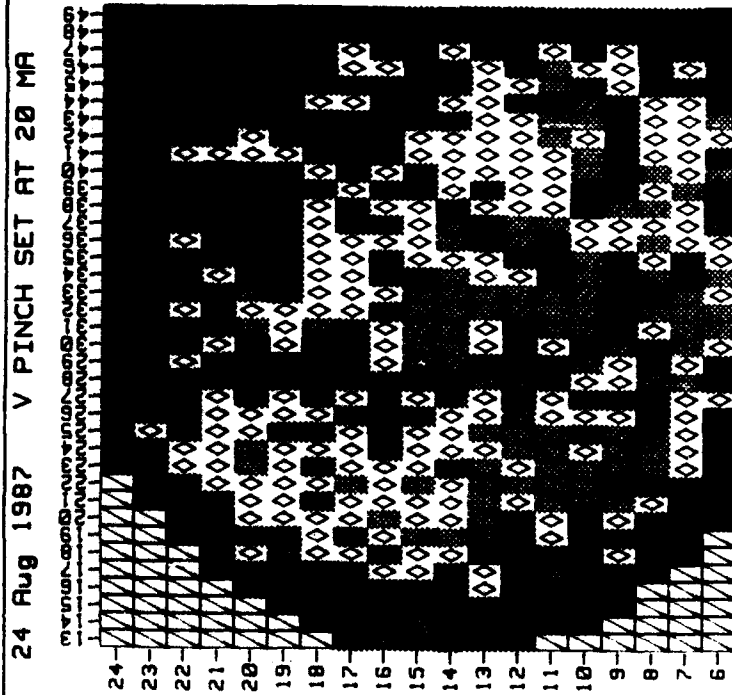

FET102AF FAILURE MAP

○ :- INVALID DATA
 □ :- OFF WAFER
 ■ RSLOPE > 500 OHM
 ■ SHORT < 1 OHM
 ■ IDSS0 > 200 mA
 ■ Gd FAIL
 ■ VKNEE > 3 V
 ■ Gm < .2 mS
 ■ GATE I > 100 uA
 ■ VPINCH > 4V @20mA
 ◇ DEVICES PASSED

Probed by:-JTP
 Probed on:-02/06/87
 TIME:-10:01:30
 -DP2 DIVISION-
 -RSRE MALVERN-

FIGURE 21 PLOTTER COPY OF FAILURE MAP USING COLOURED RECTANGLES AND SHADING

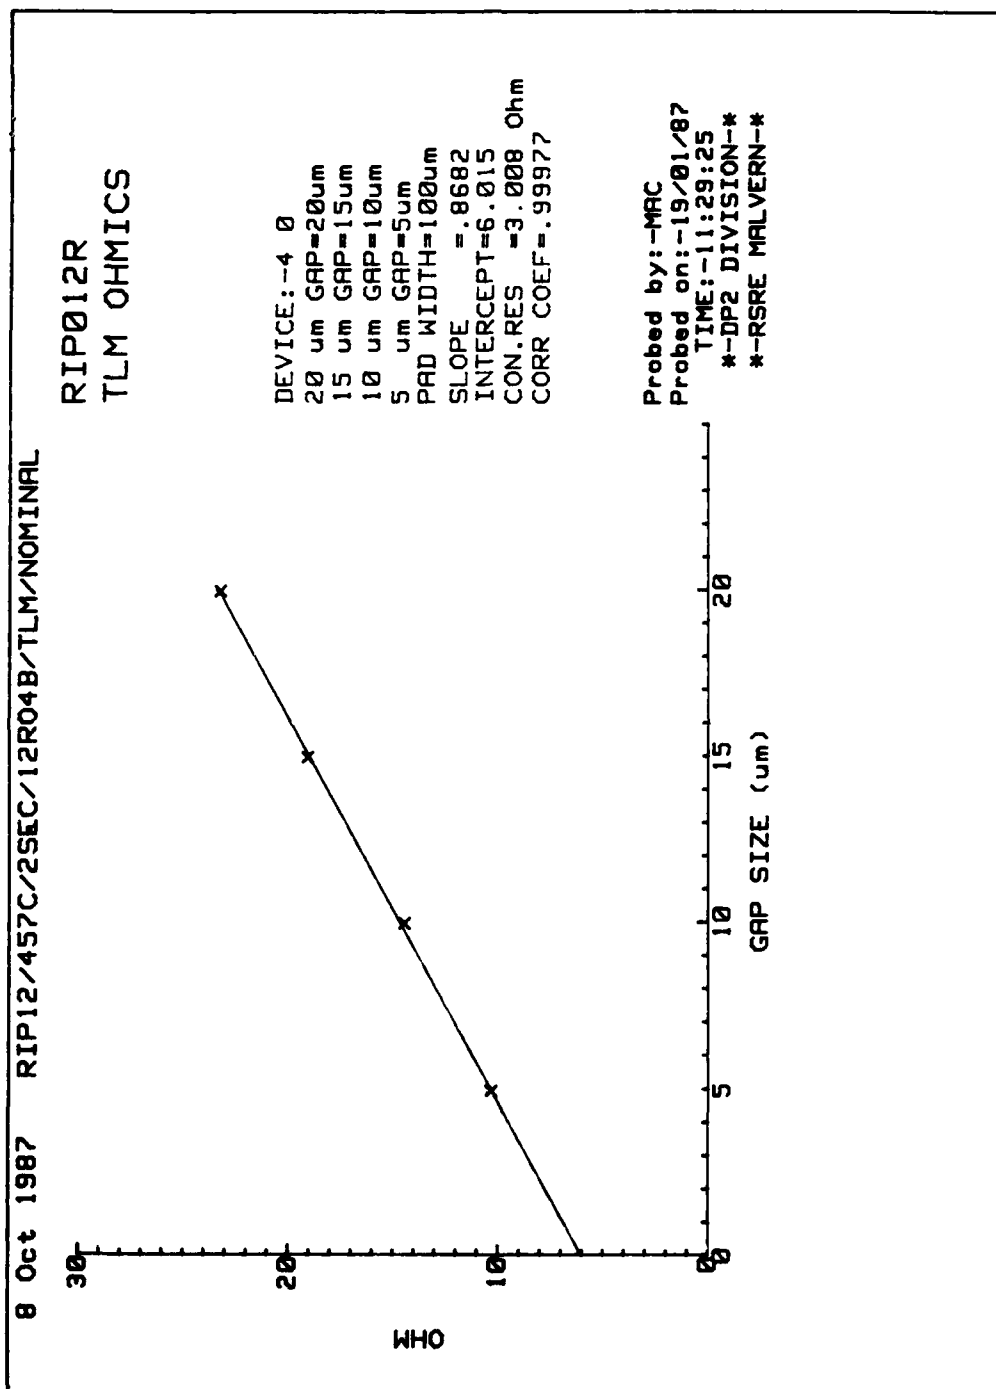


FIGURE 22 PLOT OF INDIVIDUAL TRANSMISSION LINE OHMIC MEASUREMENT,
SELECTED FROM WAFER MAP

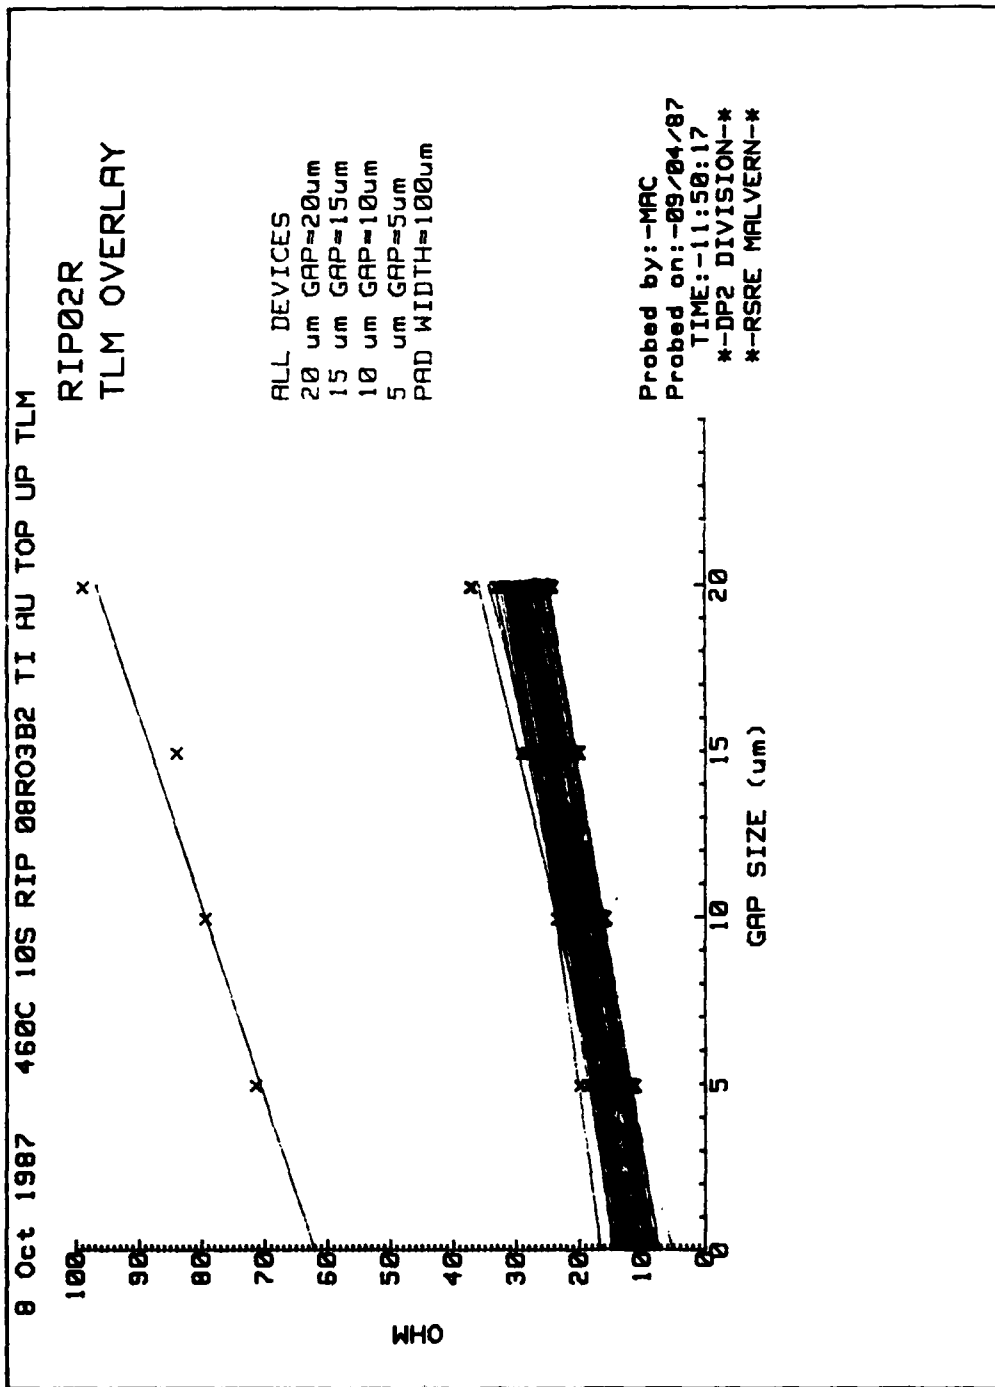


FIGURE 23 PLOT OF TRANSMISSION LINE OHMIC MEASUREMENTS FOR WHOLE
WAFER

DOCUMENT CONTROL SHEET

Overall security classification of sheet **UNCLASSIFIED**

(As far as possible this sheet should contain only unclassified information. If it is necessary to enter classified information, the box concerned must be marked to indicate the classification eg (R) (C) or (S))

1. DRIC Reference (if known)	2. Originator's Reference MEMO 4066	3. Agency Reference	4. Report Security Unclassi-Classification fied	
5. Originator's Code (if known) 778400	6. Originator (Corporate Author) Name and Location RSRE, Saint Andrews Road, Malvern, Worcs WR14 3PS			
5a. Sponsoring Agency's Code (if known)	6a. Sponsoring Agency (Contract Authority) Name and Location			
7. Title AUTOMATIC PROBER FOR THE DC CHARACTERIZATION OF GALLIUM ARSENIDE DEVICES, PART 2. THE DATA SORTING & DISPLAY FACILITY.				
7a. Title in Foreign Language (in the case of translations)				
7b. Presented at (for conference papers) Title, place and date of conference				
8. Author 1 Surname, initials HUGHES B T	9(a) Author 2 AVERY B E	9(b) Authors 3,4...	10. Date 1987. 07	pp. ref.
11. Contract Number	12. Period	13. Project	14. Other Reference	
15. Distribution statement				
Descriptors (or keywords)				
continue on separate piece of paper				
Abstract The Automatic Device Probing System used in the Microwave Devices Division (DP2) comprises separate measurement and data handling facilities. The measurement facility is described in RSRE Memorandum 4065 and the data sorting and display facility forms the subject of this memorandum. The facility described is designed to assist in analysing the large quantity of measured data obtained from device wafers and allows general trends as well as individual device parameters to be investigated. Programs have been written to produce maps which allow parameter variations across wafers to be assessed and additional routines are available which present the data in histogram form. Continued overleaf ...				

Abstract from Memo 4066 continued.

These options allow the numeric as well as the geographic distribution of the data to be investigated. Three main types of map display are available, these display the variation in magnitude of a device parameter across a wafer, the location and nature of the failure of any failed devices and the location of devices with a specified combination of parameters. The histogram programs allow the data range and class interval to be adjusted enabling estimates of yield and process control to be made. For measurements such as Capacitance/Voltage on Schottky test patterns or current/voltage on active devices plots of the measured data can be displayed. Routines are available which allow curve fitting to the measured data so that barrier heights etc can be extracted.

Full use has been made of colour and grey scales in order to maximise the visual content of the information presented on the display screen and all display modes are easily selected using a combination of menus and softkeys.

DAT
FILM
8